


SNAPPER®

EUROPEAN REAR ENGINE RIDER SERIES 15

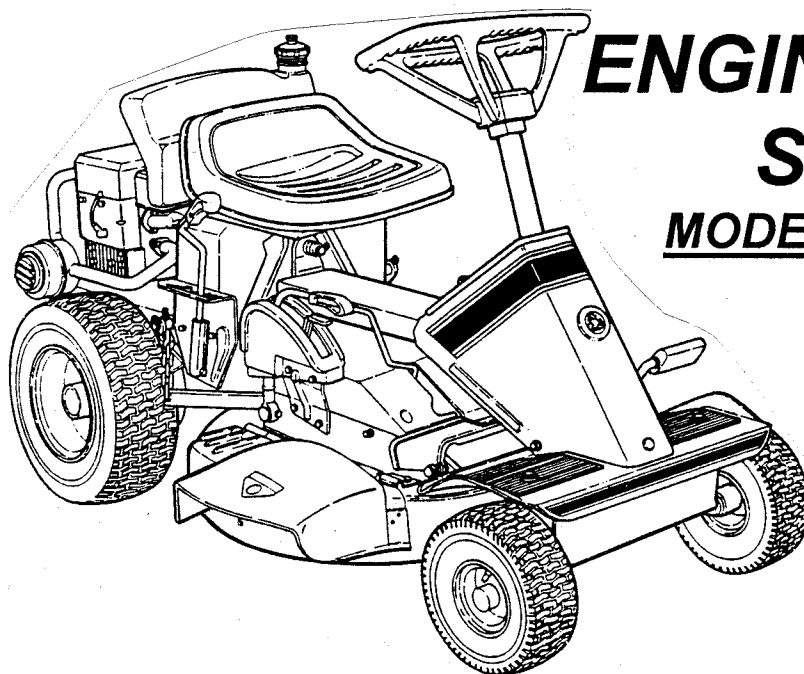


MODELS: E250815BE
E280915BE
E331315BVE
E331415KVE


CONTENTS

<u>DESCRIPTION</u>	<u>PAGE(S)</u>
WHEELS, TIRES	2 - 3
FRONT END, STEERING	4 - 5
MAIN CASE (Solid Seat Mount)	6-7
MAIN CASE (Hinged Seat Mount)	8 - 9
DIFFERENTIAL, R.H. FENDER	10 - 11
CHAIN CASE ASSEMBLY, L.H. FENDER	12 - 13
SMOOTH CLUTCH ASSEMBLY	14 - 15
CUTTING DECKS, DEFLECTORS	16 - 17
RAILS, LIFT ARMS, CAM LIFT	18 - 19
BLADE STOP PEDALS	20
BELTS, BRAKES, INTERLOCK (25" Models)	21
BELTS, BRAKES, INTERLOCK (28" & 33" Models)	22
SPINDLE ASSEMBLY	23
DRIVE DISC ASSEMBLY	24
FUEL TANK & OPERATORS SEAT	25
ENGINE & EXHAUST MUFFLER	26
THROTTLE CONTROLS	27
ELECTRICAL SYSTEMS	28 - 33
ACCESSORIES & ATTACHMENTS	34
WIRING SCHEMATICS	35 - 36
DECALS	37 - 40
WARRANTY	41

WHEELS-FRONT

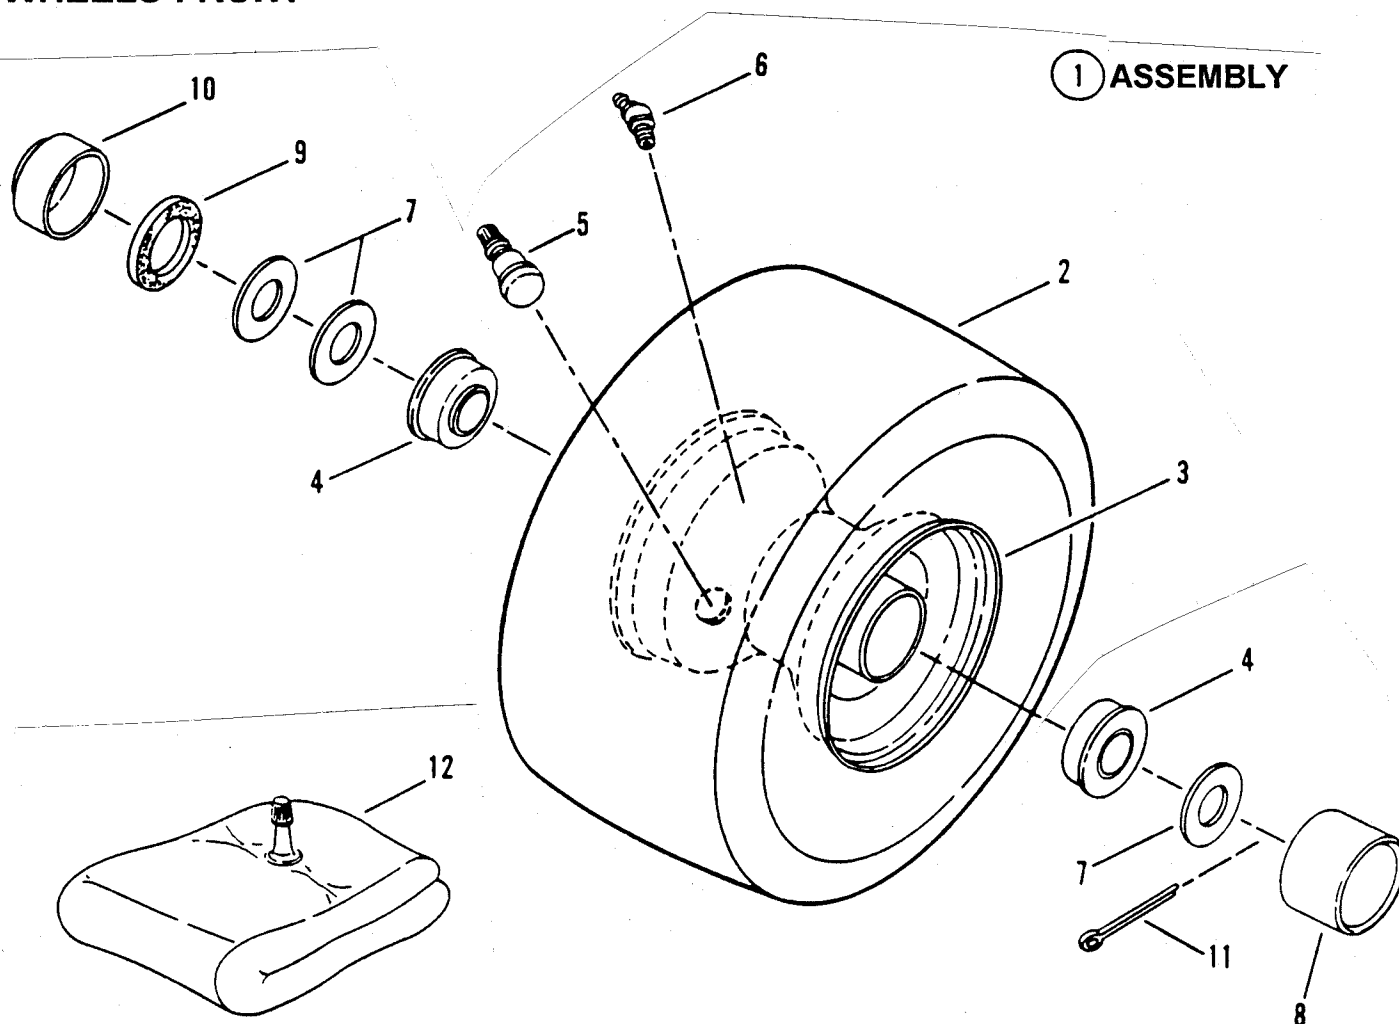


ITEM	PART NO.	DESCRIPTION
1	5-2268	ASSEMBLY, Front Tire & Rim (Complete) (Includes Items 2, 3, 4, 6, 12)
-	5-2267	ASSEMBLY, Front Tire & Rim (Includes Items 2 Thru 6)
2	2-3828	TIRE, 4.10/3.50 x 4
3	1-7146	RIM (For 4.10/3.50 x 4 Tire)
4	1-1807	BEARING, Ball
5	1-2234	VALVE, Air (Snap-in)
6	1-4669	FITTING, Lube
7	1-0935	WASHER
8	1-1022	CAP, Hub
9	1-1032	SEAL, Felt
10	3-1038	CAP, Dust
11	9-0364	PIN, 5/32 x 1" Cotter Hair
12	1-0821	TUBE, Inner (For 4.10/3.50 x 4 Tire)

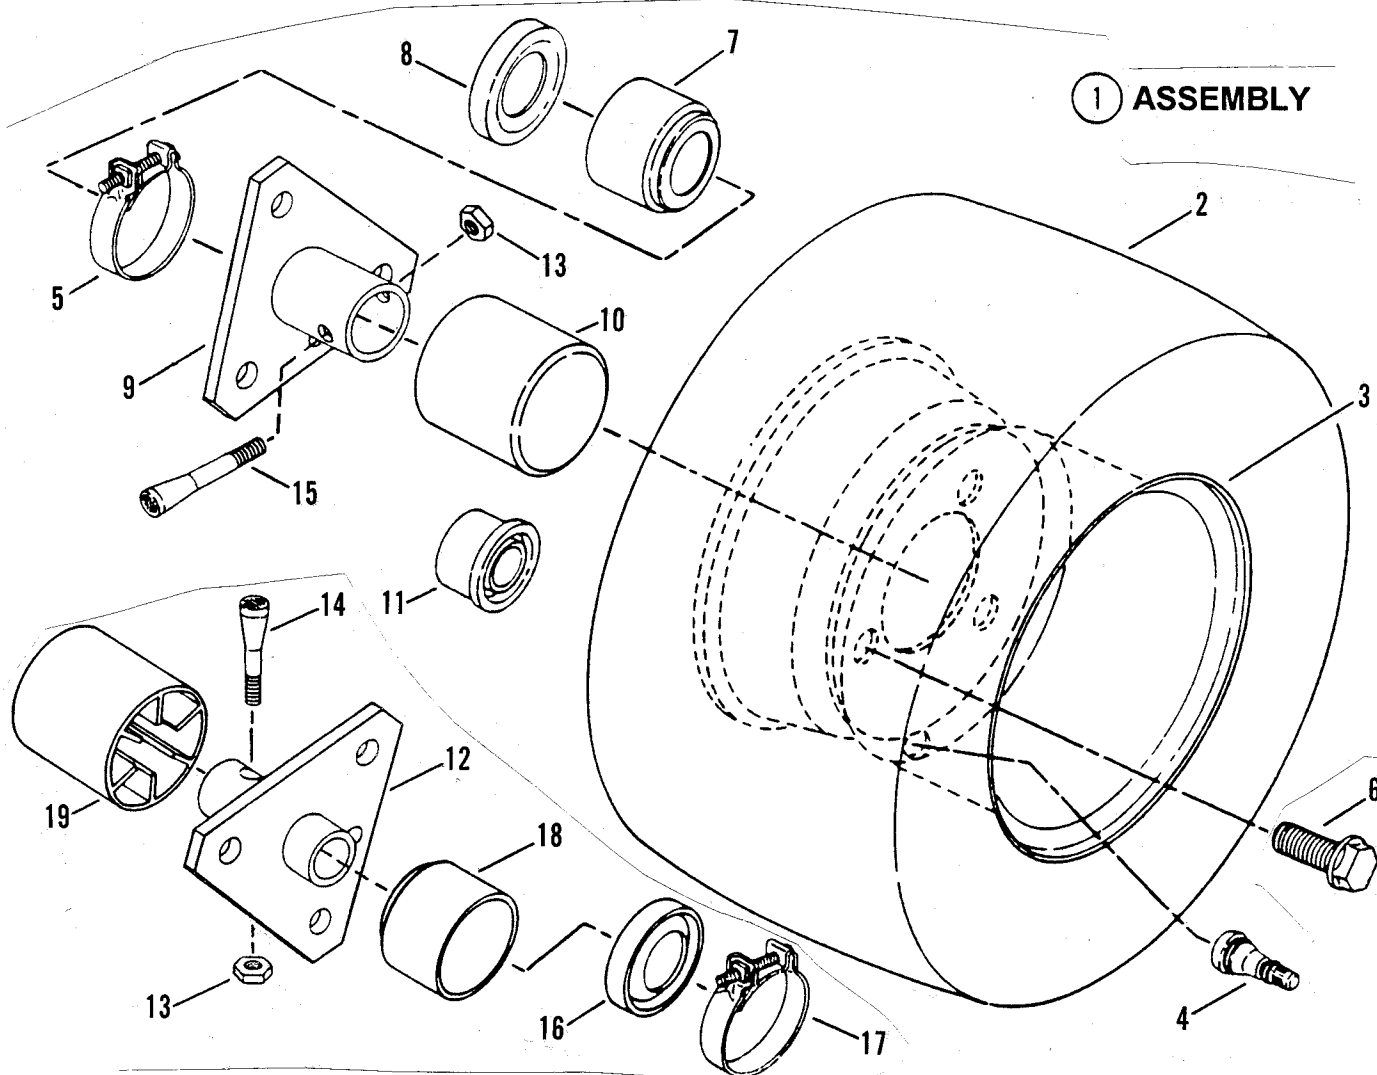


ITEM	PART NO.	DESCRIPTION
1	5-2269	ASSEMBLY, Rear Tire & Rim (Incls. Items 2A, 3A, & 4) (25" Models)
-	5-2270	ASSEMBLY, Rear Tire & Rim (Incls. Items 2B, 3B, & 4) (28" Models)
-	5-2671	ASSEMBLY, Rear Tire & Rim (Incls. Items 2C, 3C, & 4) (33" Models)
2A	2-3889	TIRE, Std., 16-4.80 x 8 (25" Models)
2B	1-5968	TIRE, Wide, 16-6.50 x 8 (28" Models)
2C	2-2584	TIRE, Ext Wide, 16-7.50 x 8 (33" Models)
3A	1-2162	RIM, Std., (For 16-4.80 x 8 Tire) (25" Models)
3B	1-2163	RIM, Wide, (For 16-6.50 x 8 Tire) (28" Models)
3C	1-7145	RIM, Ext Wide, (For 16/7.50 x 8 Tire) (33" Models)
4	1-2234	VALVE, Air (Snap-in)
5	1-1037	CLAMP, Right Hand (8 & 9 HP)
-	1-4542	CLAMP, Right Hand (13 & 14 HP)
6	9-1502	BOLT, 1/2-20 x 3/4" Lug (6)
7	3-1732	BOOT, Right Hand (8 & 9 HP)
-	1-4541	BOOT, Right Hand (13 & 14 HP)
8	1-1817	SEAL, Oil
9	4-0433	HUB, Rear Wheel (Right Hand)
10	2-3895	CAP, Hub
11	1-0967	CAP, Seal (Left Hand) (8 & 9 HP)
12	4-0434	HUB, Rear Wheel
13	1-1201	NUT, 5/16-24 Hex Center Lock
14	1-1035	BOLT, 5/16-24 x 1 5/8" Tapered (Left Hand)
15	1-1013	BOLT, 5/16-24 x 2" Tapered (Right Hand)
16	1-4662	SEAL, Oil (Left Hand)
17	1-2332	CLAMP, (Left Hand) (13 & 14 HP)
18	1-4658	BOOT, (Left Hand) (13 & 14 HP)
19	2-3522	CAP, Hub (Left Hand)

FRONT END STEERING

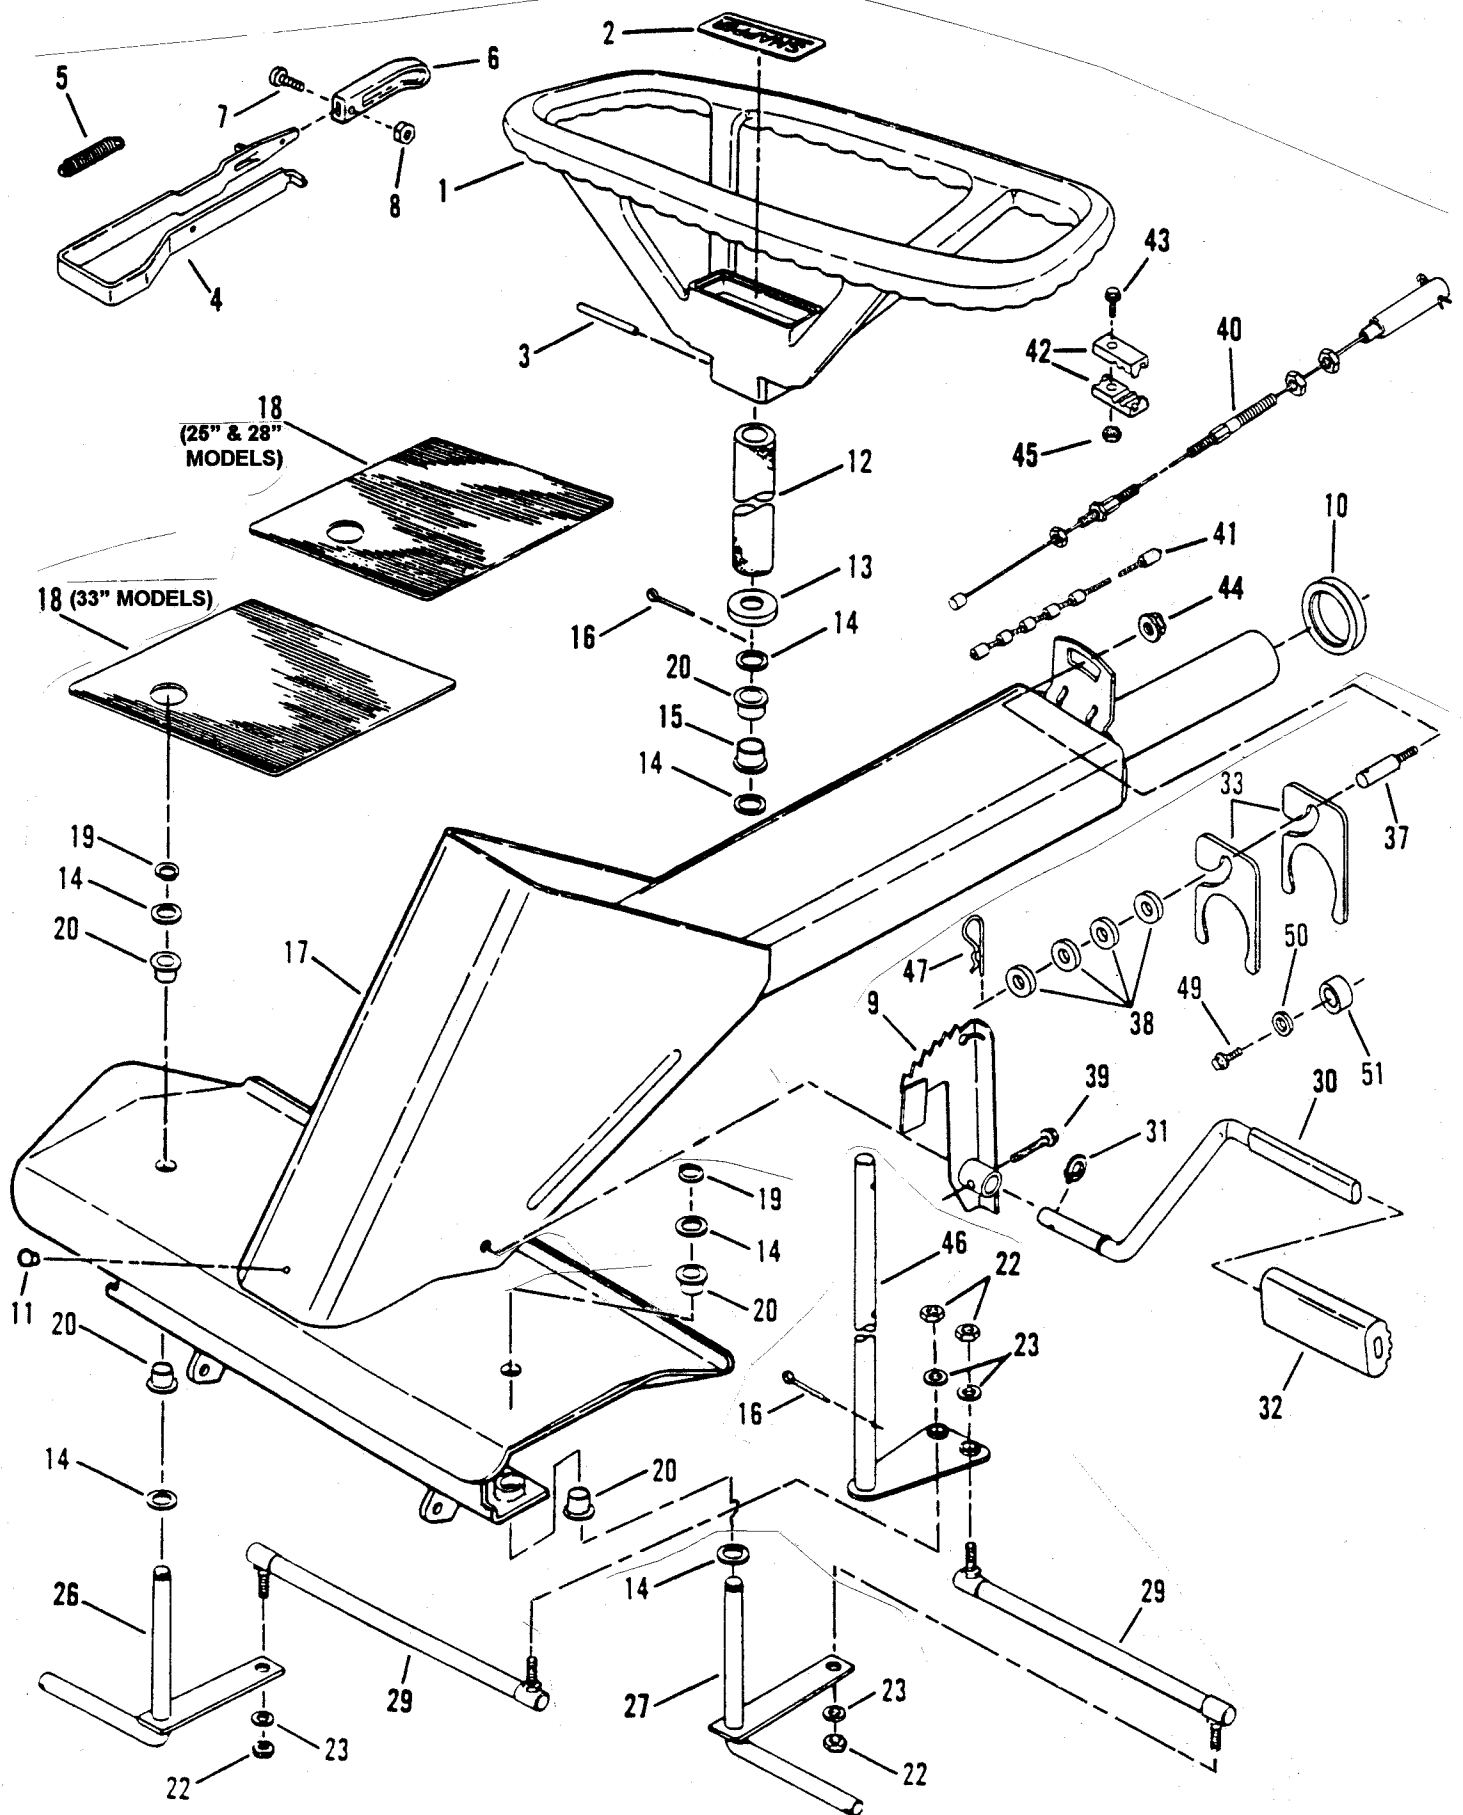


FRONT END STEERING

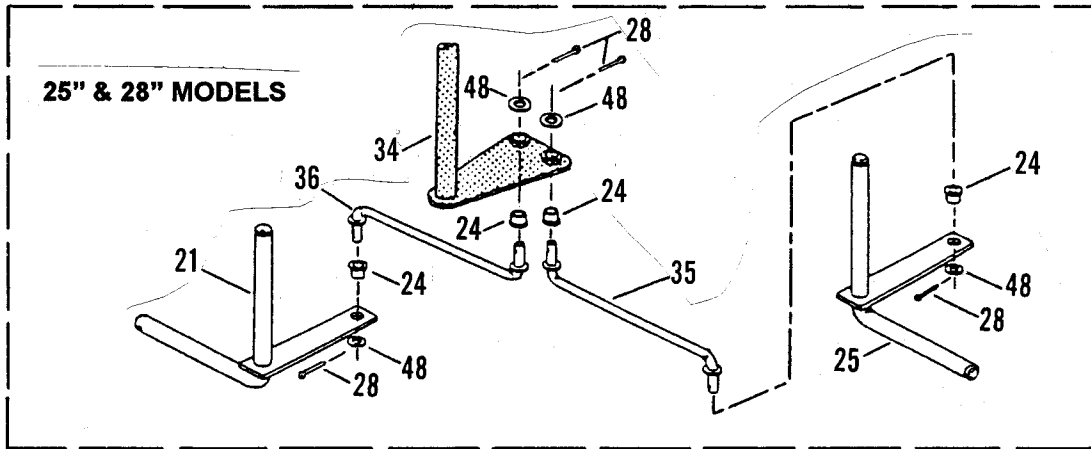


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-1941	ASSEMBLY, Steering Wheel (Includes Item 2)	25	4-1687	PIN, Narrow King (Left Side)
2	2-3781	DECAL, Snapper	26	4-1686	PIN, Wide King (Right Side)
3	1-3862	PIN, 1/4 x 1 1/2" Roll	27	4-1685	PIN, Wide King (Left Side)
4	3-3882	BRACKET, Clutch/Brake	28	9-1516	PIN, 5/32 x 1" Cotter (2)
5	2-3666	SPRING	29	2-4935	TIE-ROD (33" Models) (2)
6	2-3655	KNOB	30	2-4735	PEDAL, Clutch/Brake
7	9-1017	SCREW, #8-32 x 3/8" Cross Recess	31	1-0739	RING, Retaining
8	9-1018	NUT, #8-32 Hex	32	1-2661	PAD, Clutch/Brake Pedal
9	4-1476	ARM, Clutch/Brake	33	2-8395	SPACER, Pivot
10	2-2372	SPACER, Main Tube	34	4-1381	SHAFT, Steering (Narrow Front End)
11	1-6704	PLUG	35	2-4915	TIE-ROD, Left Side (25" & 28" Models)
12	2-3667	COVER, Steering Shaft (Foam)	36	2-4916	TIE-ROD, Right Side (25" & 28" Models)
13	2-3671	COVER	37	2-8332	STUD, 3/8-24 x 5/8" Shoulder
14	1-0935	WASHER, 3/4 Flat	38	2-2881	SPACER (2)
15	1-9166	BUSHING, 3/4" Steering Shaft	39	9-1151	SCREW, 5/16-18 x 1 1/4" Self-Tapping
16	9-1515	PIN, 3/16 x 1 1/2" Cotter (2)	40	2-2344	CABLE, Brake
17	4-1393	FRAME, Front (25" & 28" Models)	41	2-9913	CABLE, Clutch
-	4-1622	FRAME, Front (33" Models)	42	3-4174	UNION, Cable
18	2-3660	PAD, Foot (Right Side) (25" & 28" Models Shown)	43	9-1495	BOLT, 1/4-20 x 3/4" Hex Flange Lock
-	2-3663	PAD, Foot (Right Side) (33" Model Shown)	44	7-6979	NUT, 3/8-16 Hex Nyloc
-	2-3659	PAD, Foot (Left Side) (25" & 28" Models - Not Shown)	45	9-0372	NUT, 1/4-20 Hex Center Lock
-	2-3662	PAD, Foot (Left Side) (33" Model - Not Shown)	46	4-1553	SHAFT, Steering (Wide Front End)
19	1-0746	RING, Retaining (2)	47	1-2867	PIN, 1/8 x 2 9/16" Hair
20	1-0986	BEARING (5)	48	9-1514	WASHER, 3/8 Flat
21	4-1688	PIN, Narrow King (Right Side)	49	9-1198	SCREW, 3/8-16 x 5/8" Self Tapping
22	9-1297	NUT, 5/16-24 Hex (4)	50	9-0517	WASHER, 3/8 Flat
23	9-1315	WASHER, 5/16 Split Lock (4)	51	2-8774	SPACER, .39 x .625 x .19
24	1-3321	BUSHING (4)			

MAIN CASE (Solid Seat Mount)

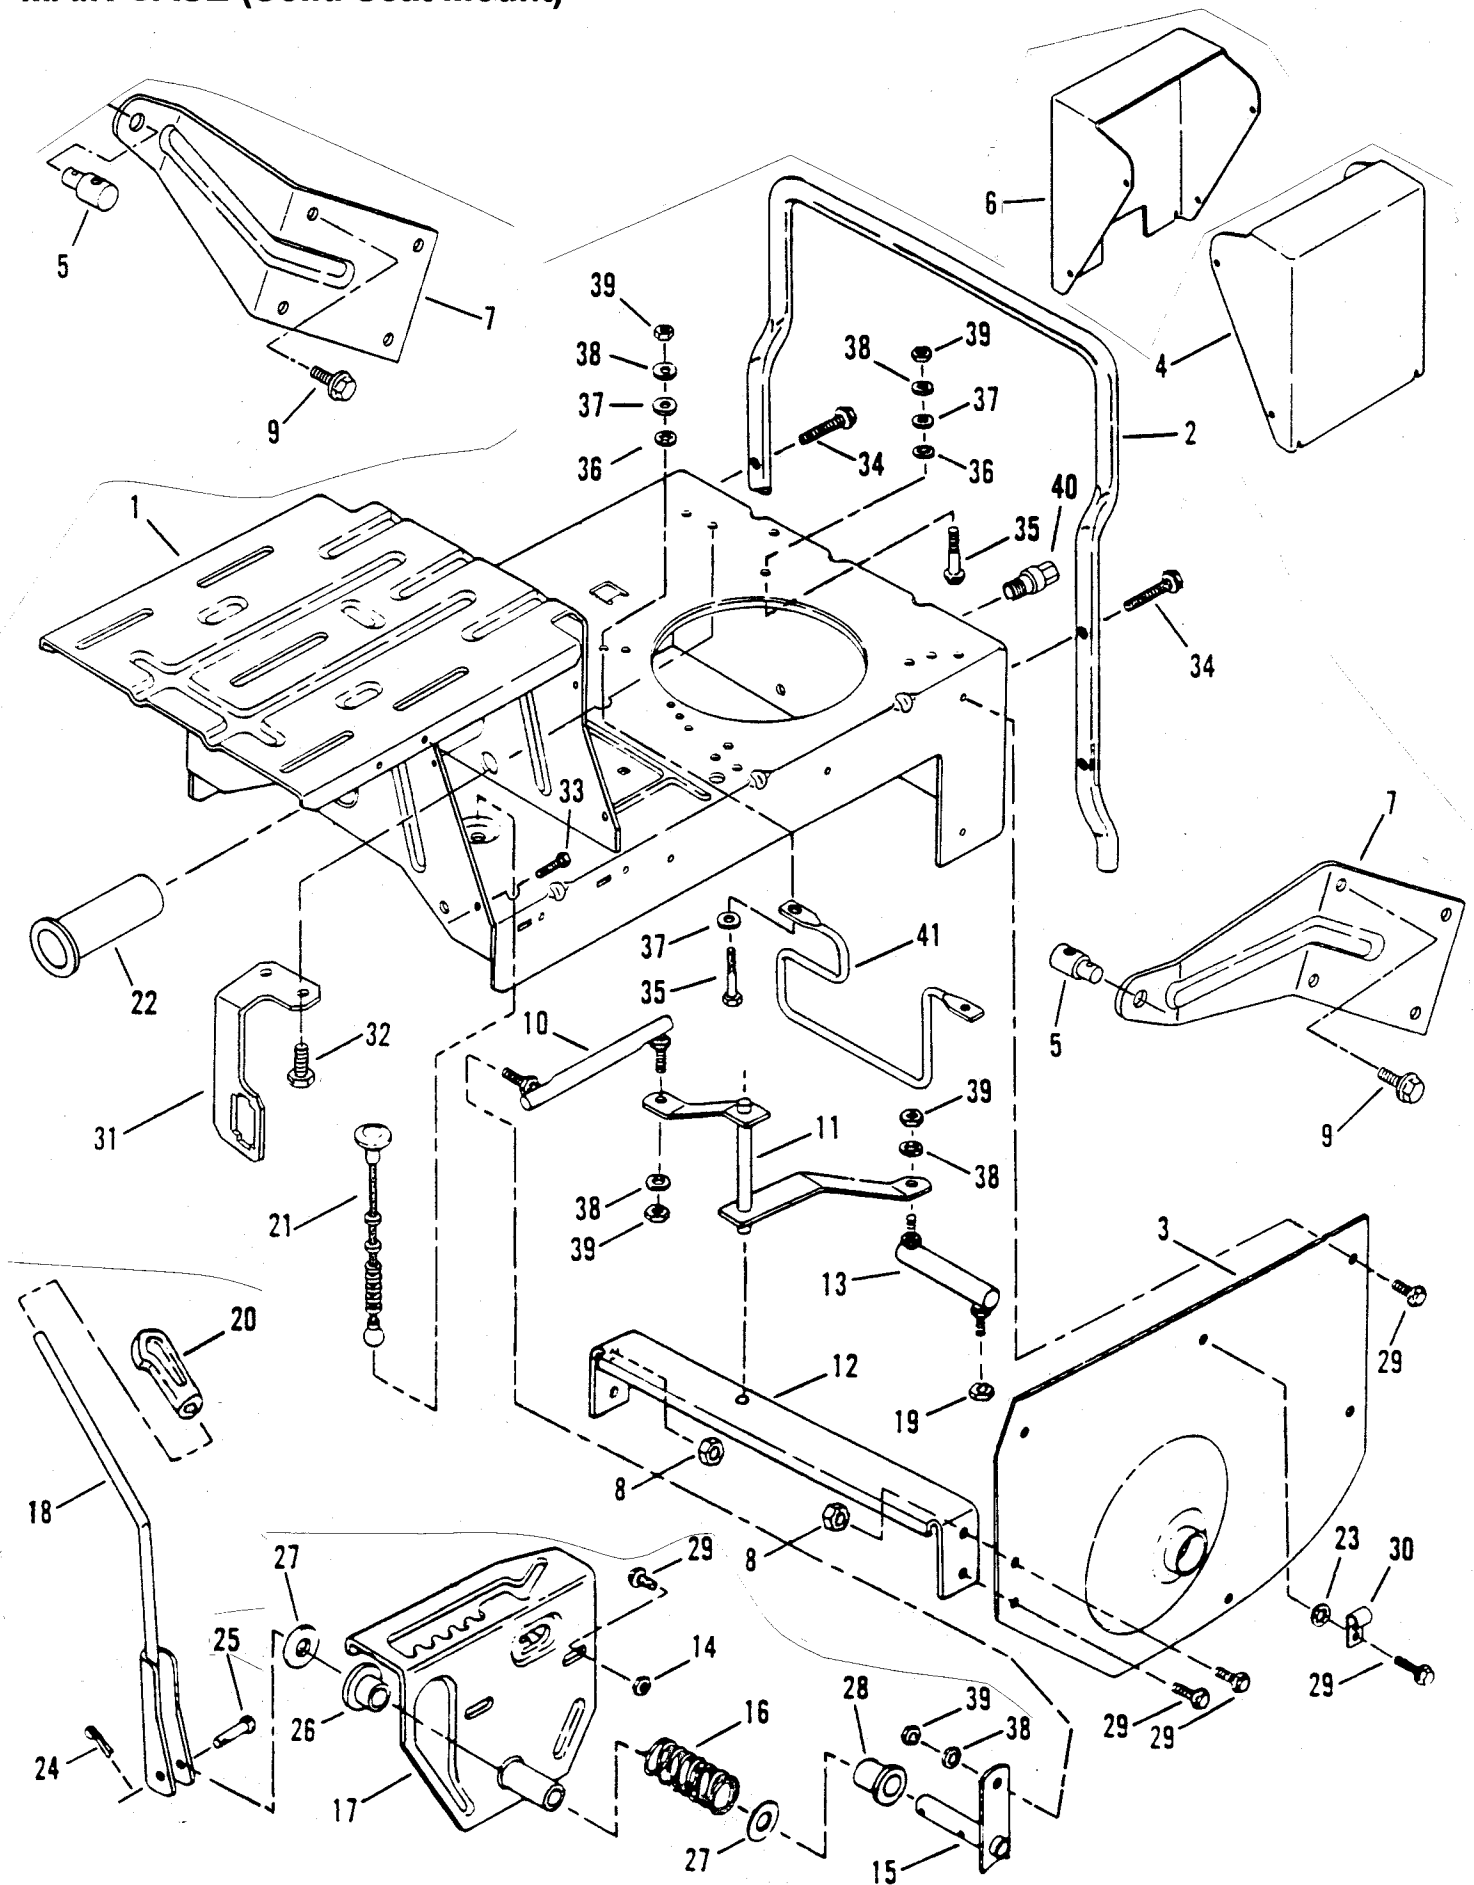

ITEM	PART NO.	DESCRIPTION
1	4-1714	CASE, Main (Standard) (25" & 28" Models)
2	3-6367	BUMPER, Rear
3	3-7285	FENDER, Left Hand (See page 12 for related parts)
4	2-8990	COVER, Battery
5	2-8200	SWIVEL (2)
6	2-8989	COVER, Switch
7	3-4299	WING, Rear (Models 28" & 33" Only)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
9	9-0793	SCREW, 5/16-18 x 3/4" Self-Tapping (4)
10	2-3676	LINK, Shift (Long)
11	4-1384	ARM, Shift
12	3-3799	BRACE, Cross
13	1-1018	LINK, Shift (Short)
14	9-0196	NUT, 5/16-18 Hex (2)
15	4-0598	ARM, Shift Handle
16	1-0754	SPRING, Shift Handle
17	4-1232	DETENT, Shift
18	4-0599	HANDLE, Shift
19	1-0969	NUT, Flange Lock 5/16-24
20	2-3656	KNOB, Shift Handle
21	2-7429	CABLE, Deck Support (25" Models Only)
22	2-2509	BUSHING, Pilot
23	9-0391	WASHER, 5/16 Internal Tooth Lock
24	9-0037	PIN, 3/32 x 3/4" Cotter Hair
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis
26	1-9245	BUSHING, Nylon
27	3-1036	WASHER, Thrust (2)
28	1-9246	BUSHING, Nylon (2)
29	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)
30	1-2652	CLIP, Wire
31	3-4724	BRACKET, Switch
32	9-0981	SCREW, Self Tapping, 10-32x1/4
33	9-1272	FASTENER, 1/4x3/4 Ratchet (6)
34	9-1506	SCREW, 5/16-18 x 1-1/2" Self-Tapping (4)
35	9-1513	SCREW, 5/16-24 x 1-3/4" Hex Head Cap (4)
36	1-1791	RETAINER, 5/16 Bolt (4)
37	9-1296	WASHER, 5/16" Flat (4)
38	9-1315	WASHER, 5/16" Split Lock (8)
39	9-1297	NUT, 5/16-24 Hex (8)
40	2-2486	DRAIN, Oil (Short)
41	1-7653	GUIDE, Belt (25" Models)
-	2-8596	GUIDE, Belt (28" Models)
-	2-8651	GUIDE, Belt (33" Briggs)


MAIN CASE (Hinged Seat Mount)

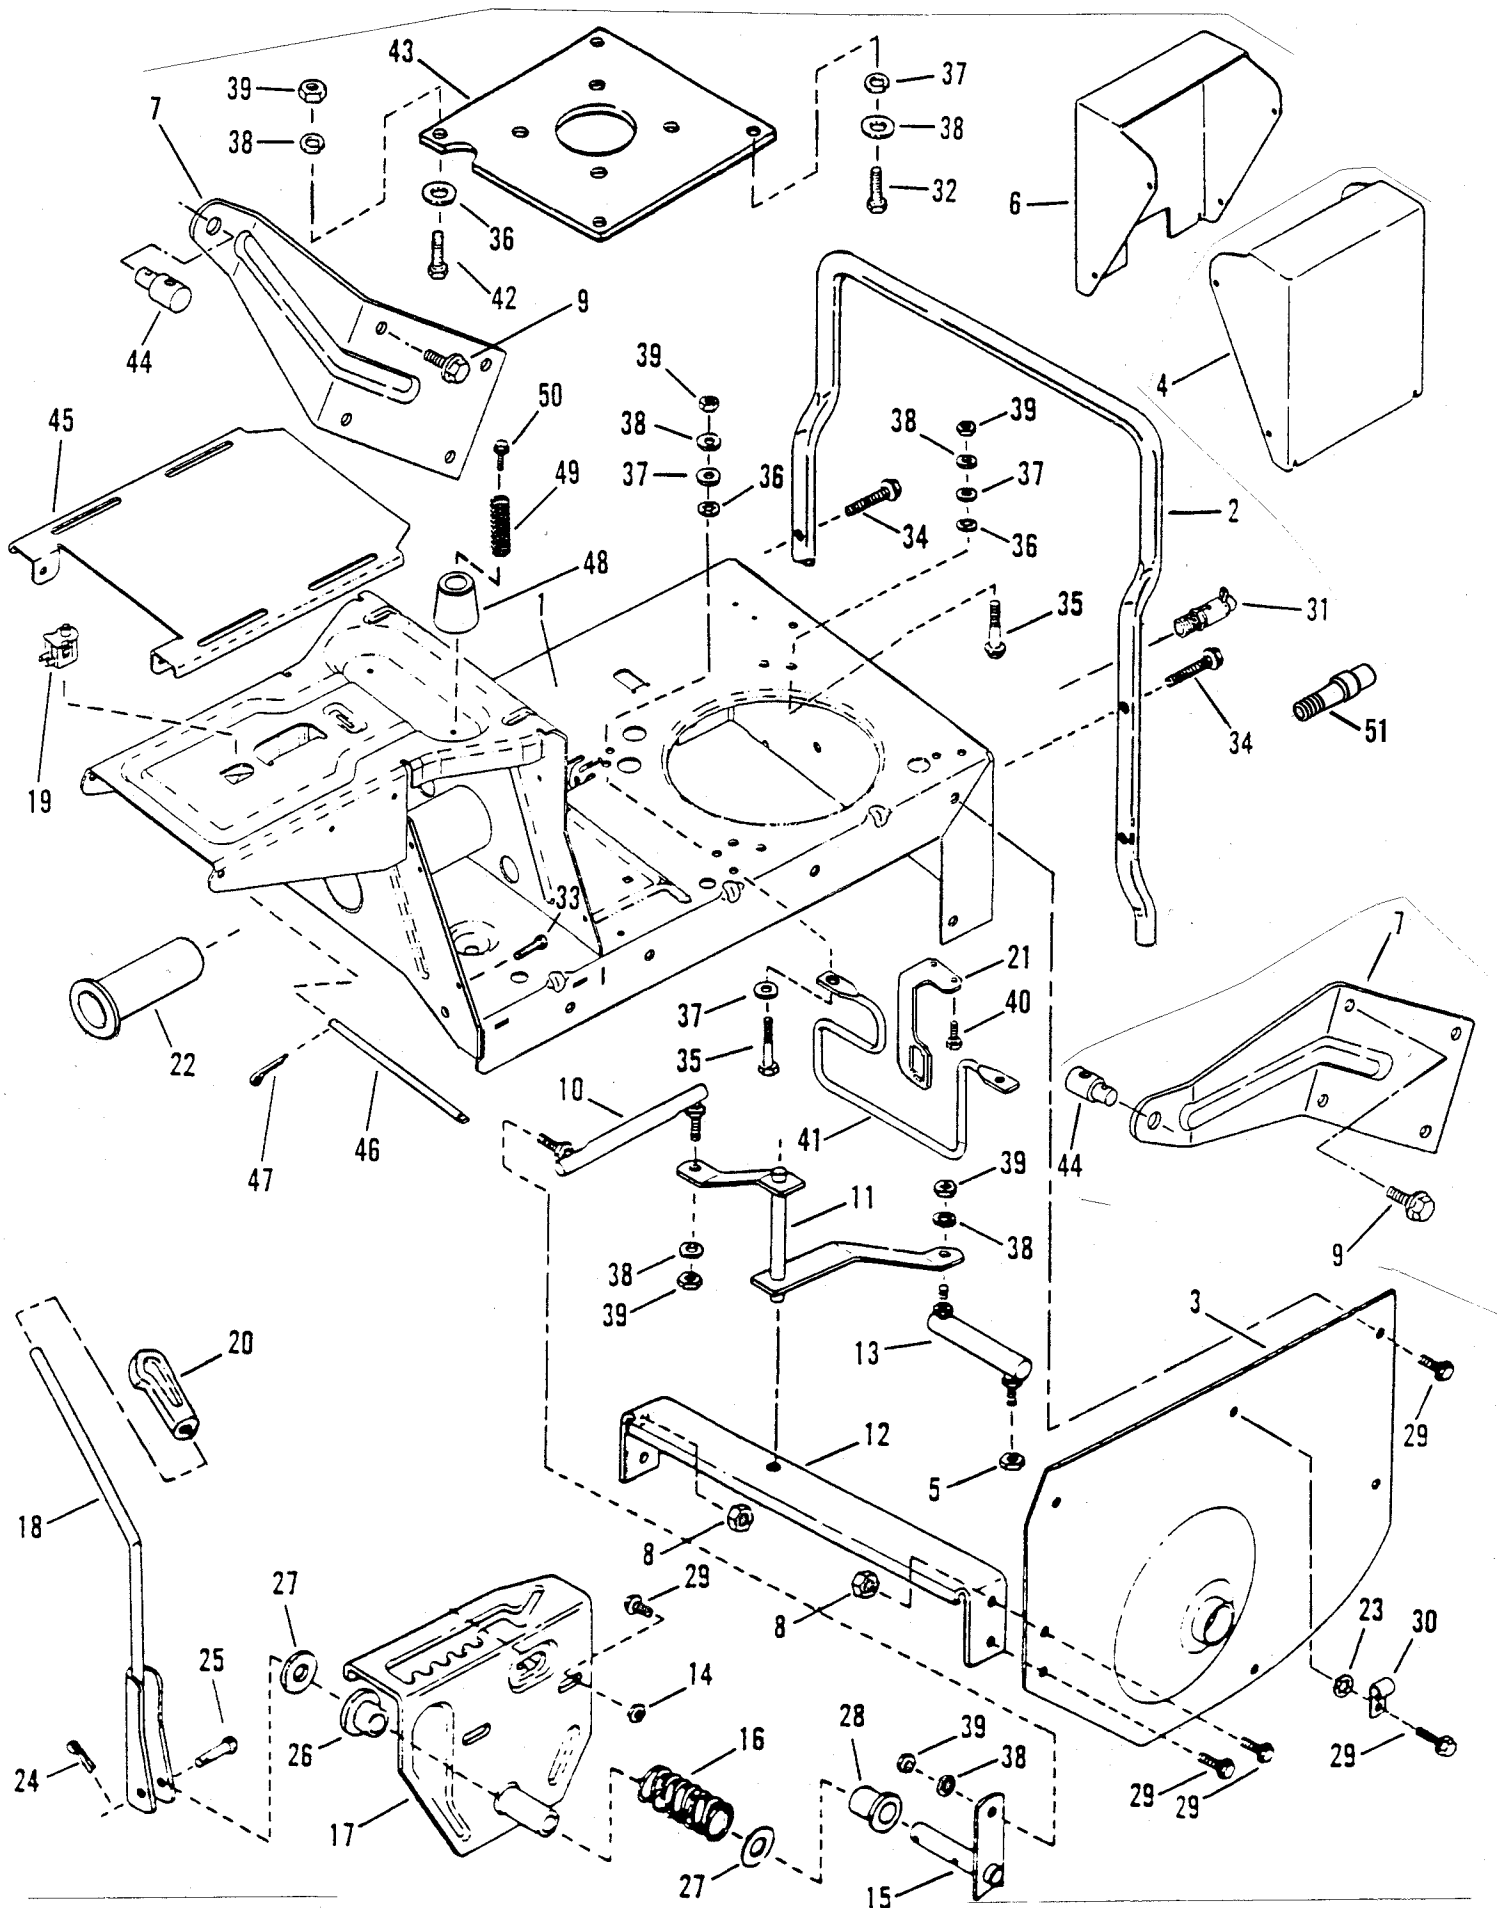

ITEM	PART NO.	DESCRIPTION
1	4-1715	CASE, Main, Units 3314 (Kohler)
—	4-1700	CASE, Main, Units 3013 (Briggs)
2	3-6367	BUMPER, Rear
3	3-7285	FENDER, Left Hand (See page 12 for related parts)
4	2-8990	COVER, Battery
5	1-0969	NUT, 5/16-24 Hex Flange Lock
6	2-8989	COVER, Switch
7	3-4299	WING, Rear (Models 28" & 33" Only)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
9	9-0793	SCREW, 5/16-18 x 3/4" Self-Tapping (4)
10	2-3676	LINK, Shift (Long)
11	4-1384	ARM, Shift
12	3-3799	BRACE, Cross
13	1-1018	LINK, Shift (Short)
14	9-0196	NUT, 5/16-18 Hex (2)
15	4-0598	ARM, Shift Handle
16	1-0754	SPRING, Shift Handle
17	4-1232	DETENT, Shift
18	4-0599	HANDLE, Shift
19	2-3354	SWITCH, Seat
20	2-3656	KNOB, Shift Handle
21	3-4724	BRACKET, Switch
22	2-2509	BUSHING, Pilot
23	9-0391	WASHER, 5/16 Internal Tooth Lock
24	9-0037	PIN, 3/32 x 3/4" Cotter
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis
26	1-9245	BUSHING, Nylon
27	3-1036	WASHER, Thrust (2)
28	1-9246	BUSHING, Nylon (2)
29	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)
30	1-2652	CLIP, Wire
31	2-7972	DRAIN, Oil (1/4 Turn) (Kohler)
32	7-7692	SCREW
33	9-1272	FASTENER, 1/4 x 3/4 Ratchet (6)
34	9-1506	SCREW, 5/16-18 x 1 1/2" Self-Tapping (4)
35	9-1513	SCREW, 5/16-24 x 1 3/4" Hex Head Cap (4)
36	1-1791	RETAINER, 5/16 Bolt (4)
37	9-1296	WASHER, 5/16" Flat (4)
38	9-1315	WASHER, 5/16" Split Lock (8)
39	9-1297	NUT, 5/16-24 Hex (8)
40	9-1080	SCREW, Self Tap, #10x1/4" (2)
41	2-8651	GUIDE, Belt (33" Briggs)
—	2-8876	GUIDE, Belt (33" Kohler)
42	9-0238	SCREW, 5/16-24x1" Hex Head Cap (4)
*43	3-4093	PLATE, Engine
44	2-8200	SWIVEL (2)
45	3-4664	PLATE, Seat
46	2-8656	PIN, Hinge
47	9-0360	PIN, 1/16 x 3/4" Cotter
48	2-8540	CUSHION
49	2-8657	SPRING, Seat O.P.C.
50	9-0539	SCREW, Self Tapping 1/4-20 x 1/2"
51	2-2486	DRAIN, Oil (Briggs)

*NOTE: Item 43 is used on the 14 HP Kohler engines only.


DIFFERENTIAL, R.H. FENDER

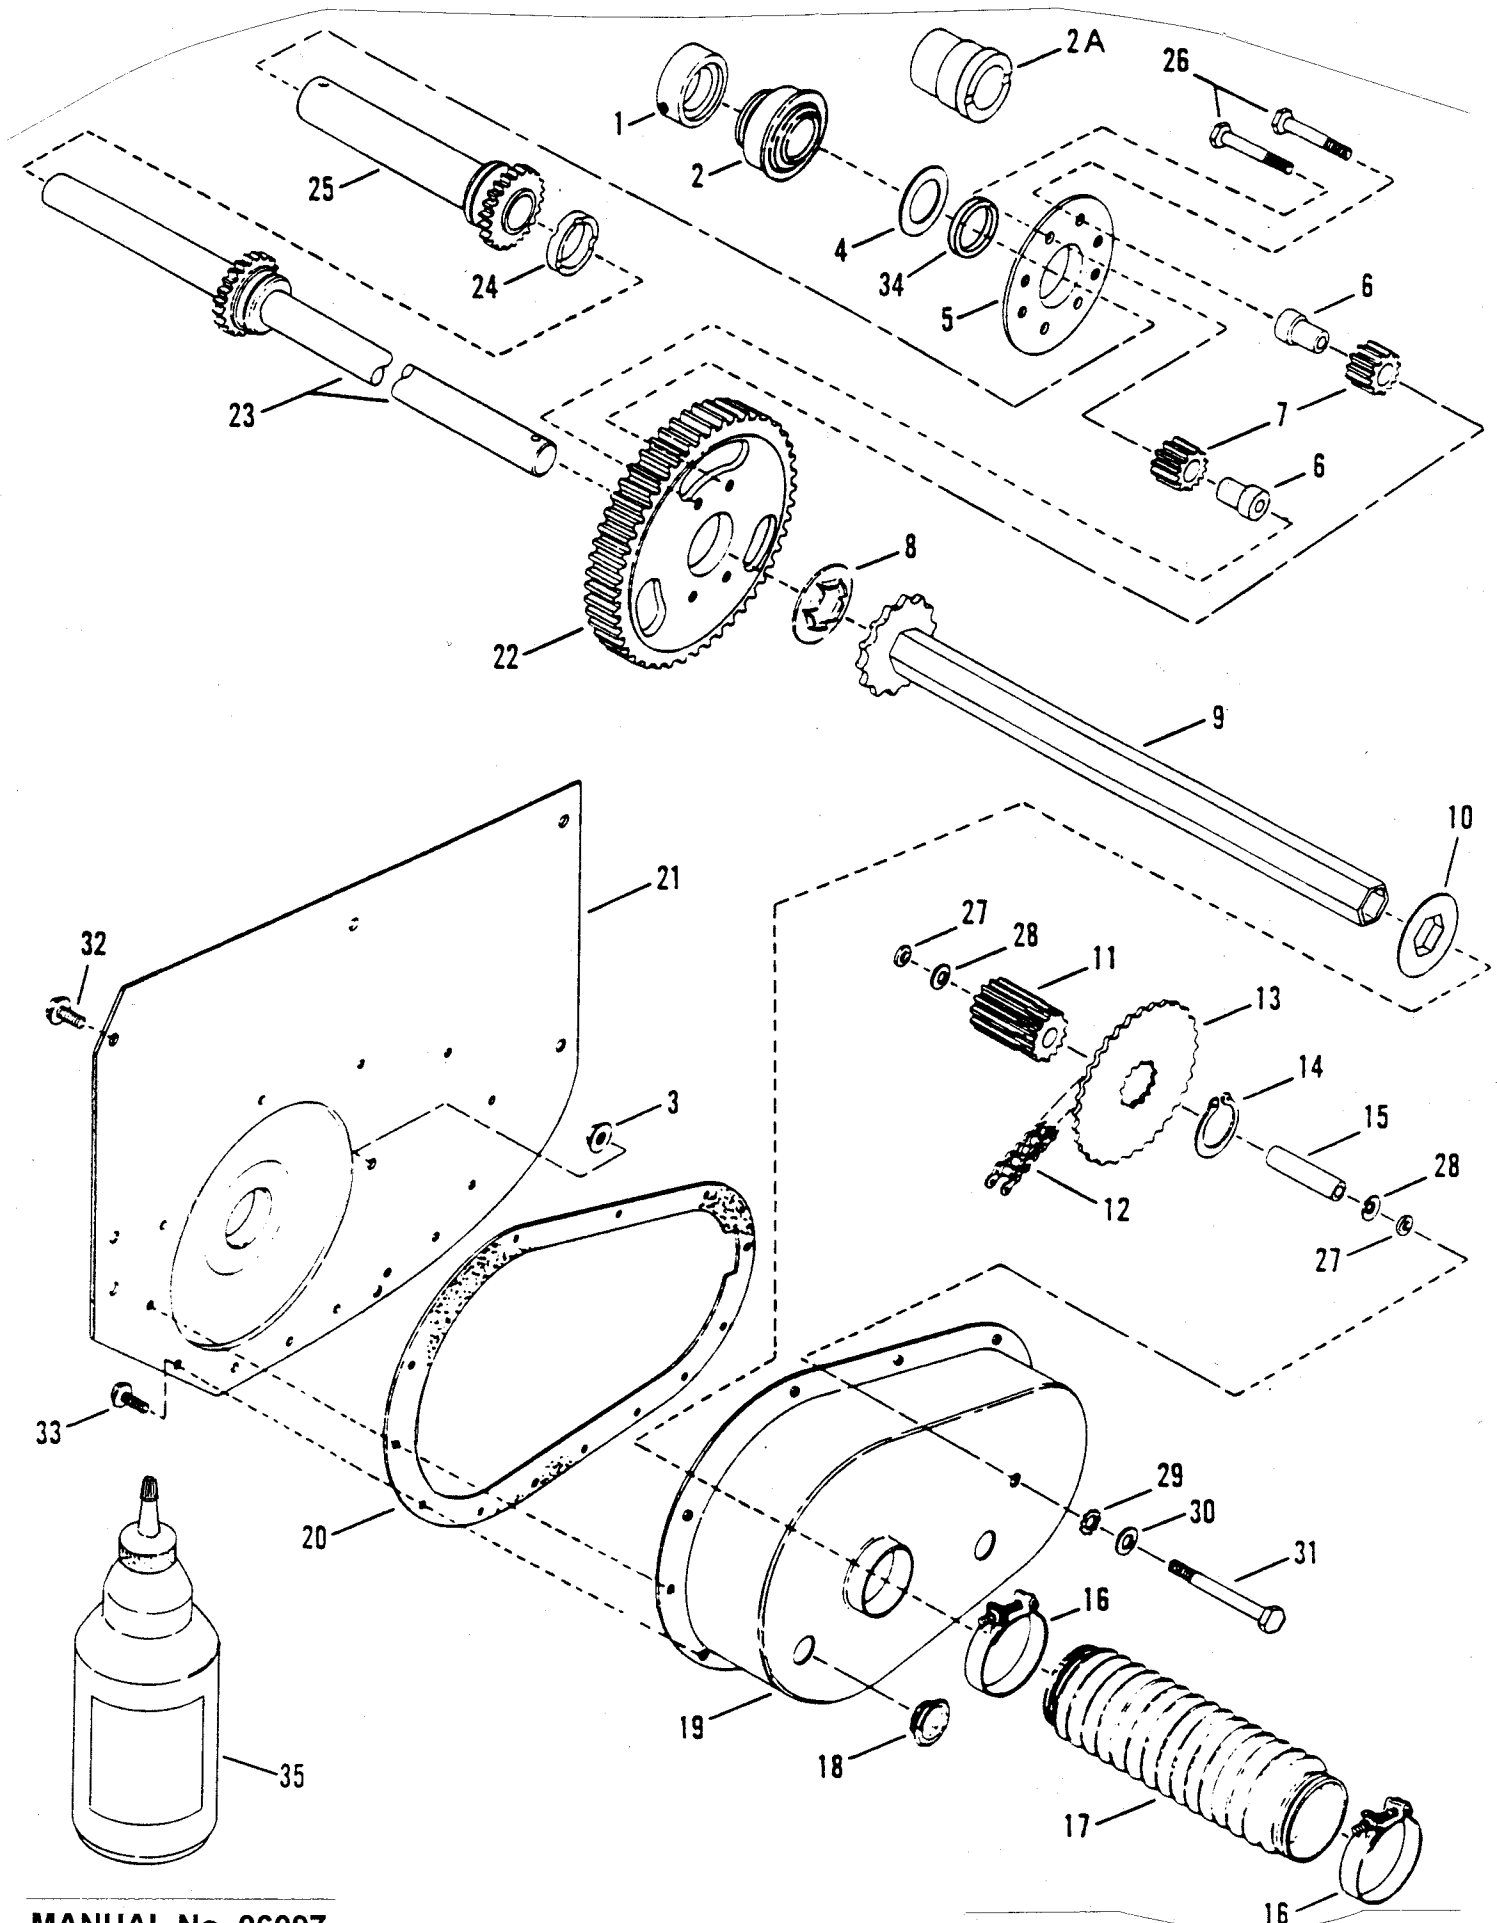

ITEM	PART NO.	DESCRIPTION
1	1-4401	COLLAR, Lock (Includes #9-0201 Set Screw)
2	1-8822	BALL BEARING, Axle (R. H. Fender) (33" Models - 13 & 14 HP)
2A	1-2296	BEARING, Axle (R. H. Fender) (25" & 28" Models - 8 & 9 HP)
3	1-0969	NUT, 5/16-24 Hex Flange Lock
4	3-1079	WASHER, Thrust
5	3-8067	PLATE, Differential
6	2-2115	SPACER, Pinion (4)
7	2-1127	GEARS, Differential Pinion
8	1-1072	WASHER, Thrust
9	5-1584	ASSEMBLY, Drive Hex Tube
10	1-0988	WASHER, Hex Insert
11	1-0964	GEAR, 11 Teeth-10 Pitch
12	1-0941	CHAIN, 46 Pitch (#35)
13	2-1129	SPROCKET
14	1-0965	RING, Retaining
15	2-1128	SPACER
16	1-1037	CLAMP, Boot (2)
17	1-7083	BOOT, Oil Seal
18	1-1024	PLUG, Oil Fill & Check
19	3-7279	CASE, Transmission
20	2-8762	GASKET, Transmission Case
21	3-7957	FENDER, Right Hand (33" Commercial Models)
--	3-7280	FENDER, Right Hand (25" & 28" Standard Models)
22	2-1158	GEAR, 63 Teeth-10 Pitch
23	4-7763	AXLE, Long (Includes Gear) (Use Only With Short Axle #5-7398)
24	1-1026	SPACER
25	5-7398	AXLE, Short (Includes Gear) (Use Only With Long Axle #4-7763)
26	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Cap Special Lock (4)
27	1-1156	O-RING, 5/16 (2)
28	1-1782	WASHER, Belleville (2)
29	9-0395	WASHER, 5/16 External Tooth Lock
30	9-0188	WASHER, 5/16 Flat
31	1-1042	BOLT, 5/16-24 x 2-5/8" Idler
32	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (11)
33	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (13)
34	3-2107	SPACER, Short Axle
35	6-1017	GREASE, Transmission
--	6-0411	KIT, Differential (Includes item 2A and 3-7280 Fender)
--	6-0662	KIT, Differential (Includes item 2 and 3-7957 Fender)

CHAIN CASE, L. H. FENDER

① ASSEMBLY



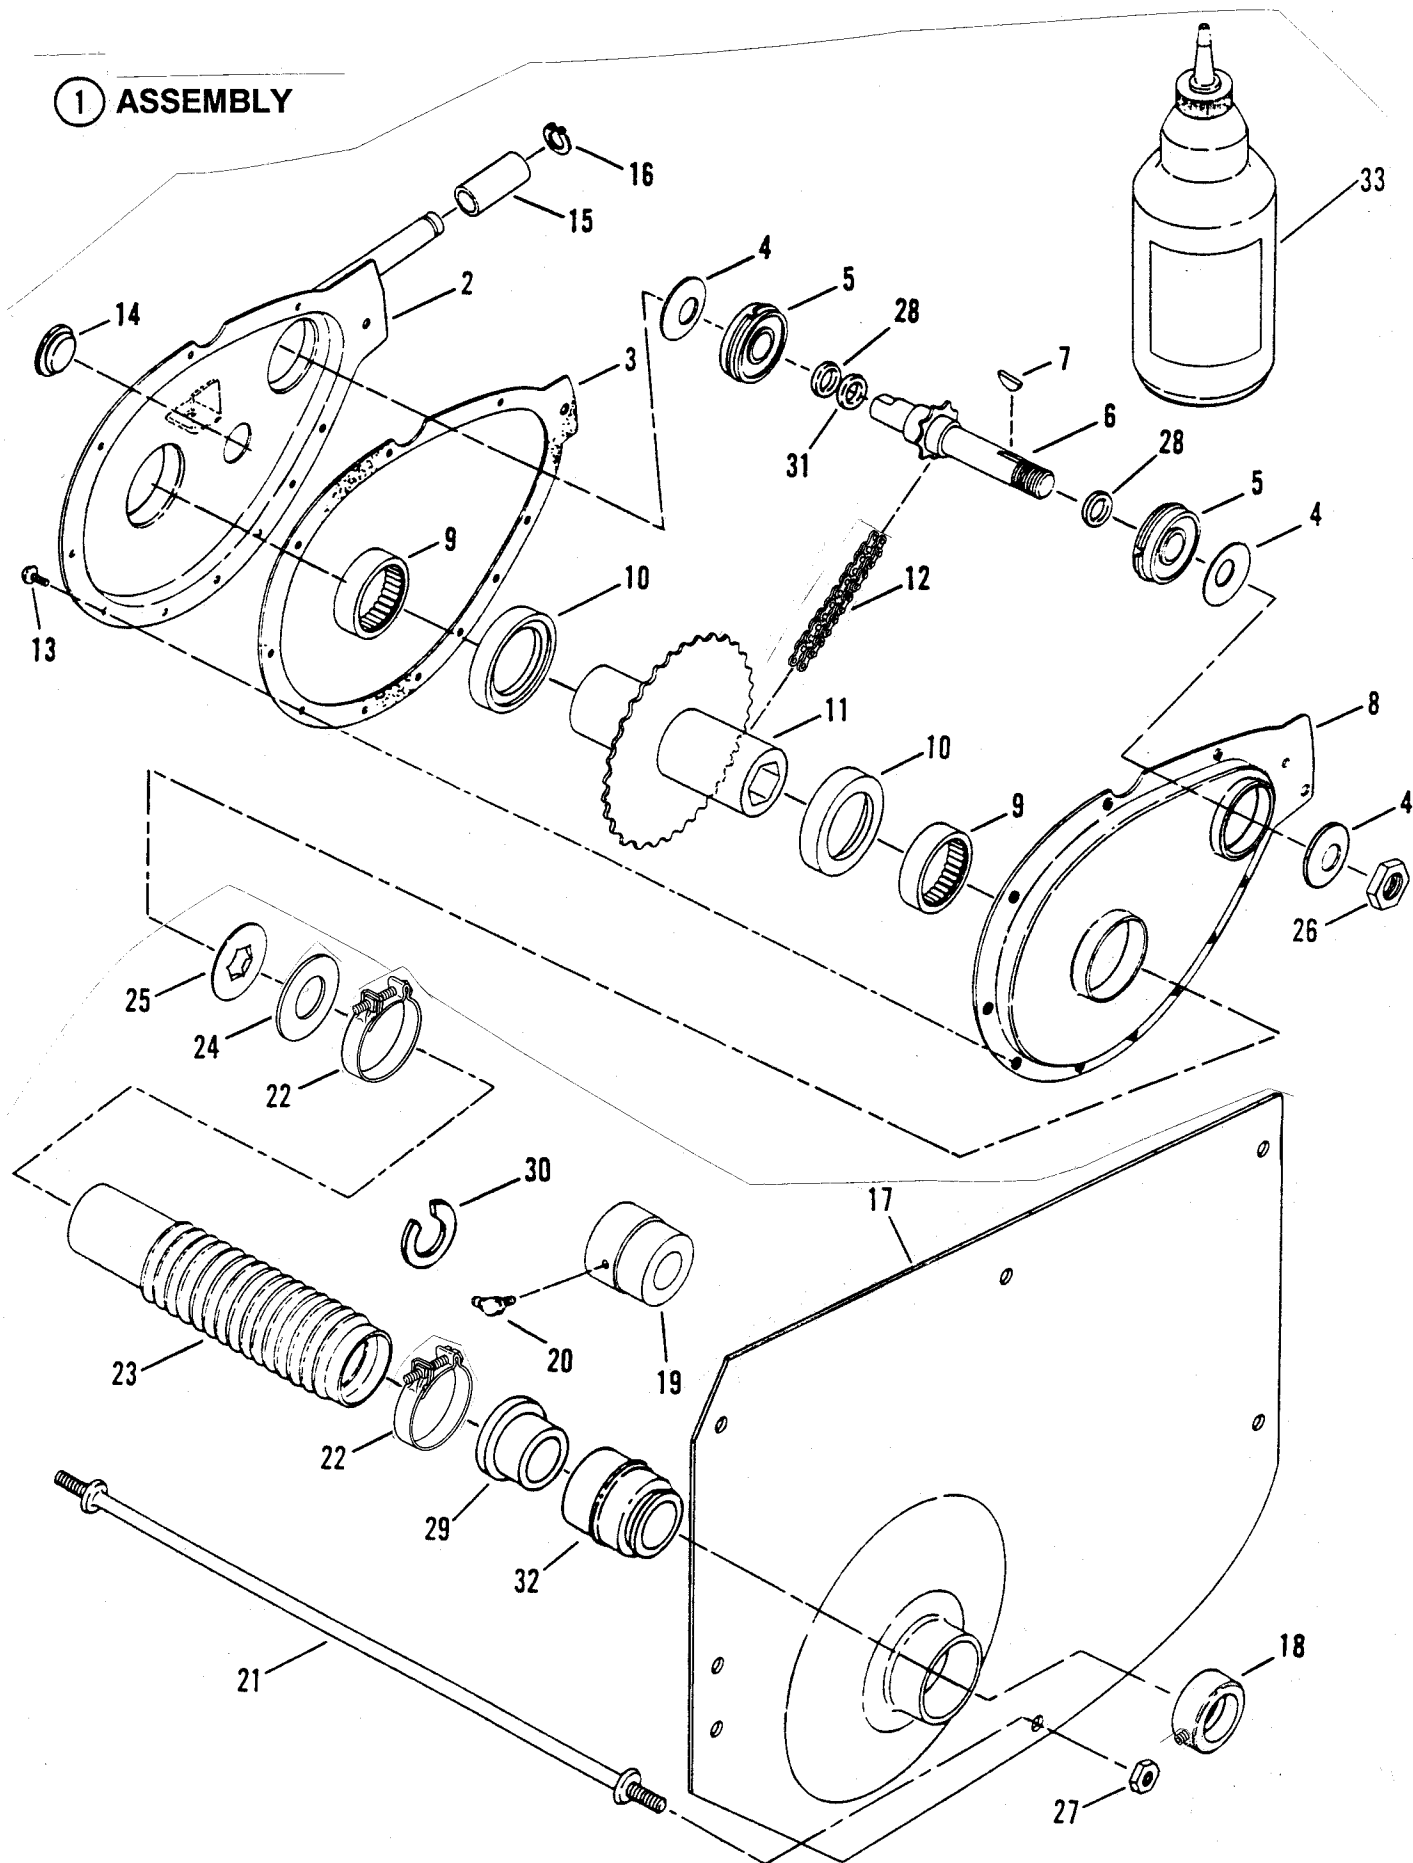


ITEM	PART NO.	DESCRIPTION
1	5-2683	ASSEMBLY, Chain Case (Includes Items 2 Thru 13,15,16,31 Thru 33)
2	4-1136	CASE, Sprocket
3	2-8761	GASKET, Case Cover
4	1-1121	WASHER, Belleville (2)
5	1-0756	BEARING, Ball (2)
6	1-8963	SPROCKET & SHAFT
7	1-0614	KEY, 1/8 x 5/8" Woodruff
8	3-9778	COVER, Chain Case
9	1-0942	BEARING, Needle (2)
10	1-1086	WASHER, Nylon Thrust (2)
11	4-0355	HUB & SPROCKET
12	1-0941	CHAIN
13	9-0307	SCREW, #10-24 x 5/8" Self-Tapping (10)
14	1-1024	PLUG, Oil Fill & Check
15	2-2785	ROLLER
16	1-0776	RING, Retaining
17	3-7285	FENDER, Left Hand (25" & 28" Models, 8 & 9 HP)
—	3-7958	FENDER, Left Hand (33" Models, 13 & 14 HP)
18	1-4625	COLLAR, Lock (Includes P.N. 9-0776 Set Screw, 1/4-20 x 1/4")
19	5-0918	BEARING, Left Hand Fender (Includes Item 20) (25" & 28" Models, 8 & 9 HP)
20	1-3324	FITTING, Lube
21	1-1070	ROD, Cross-Tie
22	1-1037	CLAMP, Boot (2)
23	1-7084	BOOT, Oil Seal
24	1-1071	WASHER, Thrust Nylon
25	1-1072	WASHER, Thrust
26	9-1505	NUT, 5/8-18 Hex Lock
27	1-0969	NUT, 5/16-24 Hex Flange Lock
28	1-9260	O-RING (2)
29	2-3447	SPACER
30	1-2271	WASHER, Shim (As Required)
31	2-7981	WASHER, Shim (6)
32	1-4624	BEARING, Left Hand Fender (33" Models, 13 & 14 HP)
—	5-1451	ASSEMBLY, Left Hand Fender (Includes P.N. 3-7958 Fender & P.N. 1-4624 Bearing) (33" Models, 13 & 14 HP)
33	6-1017	GREASE, Transmission

NOTE: See Pages 14 & 15 For Illustration Of Brake Lever Assembly And Related Parts.


SMOOTH CLUTCH ASSEMBLY

① ASSEMBLY

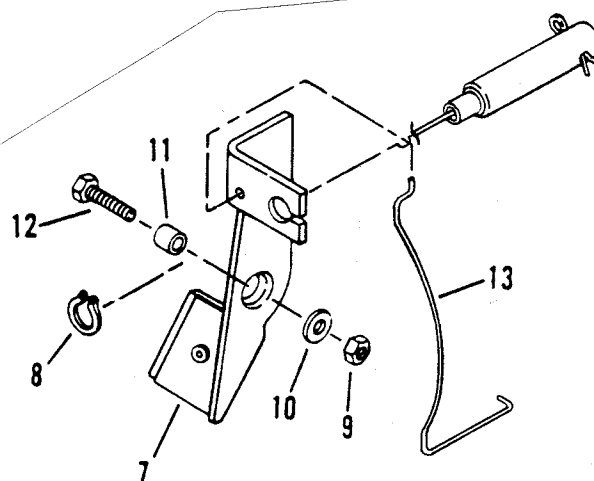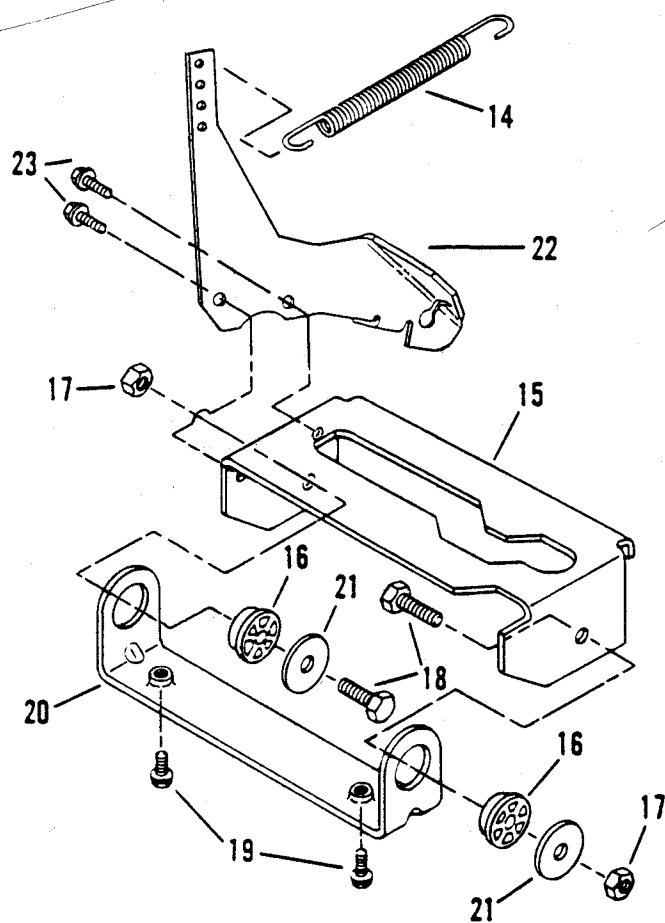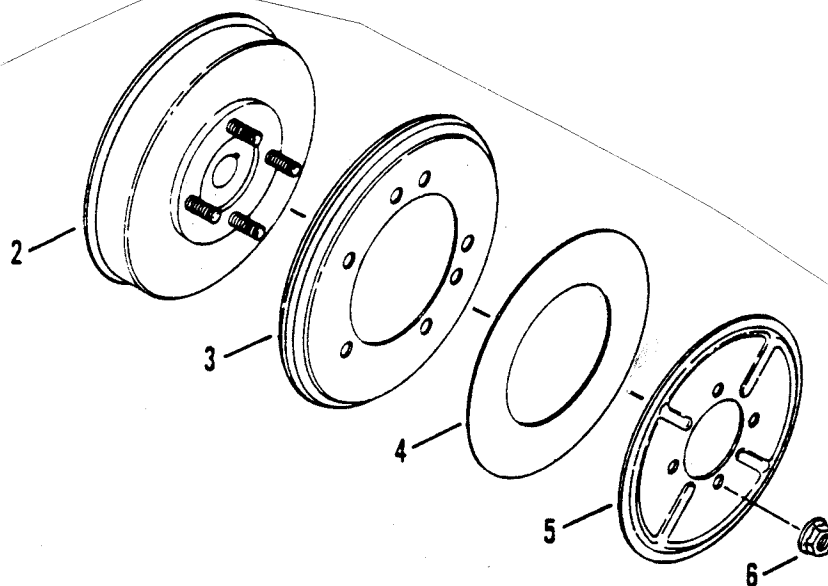


ITEM	PART NO.	DESCRIPTION
1	5-3114	ASSEMBLY, Smooth Clutch (Includes Items 2 Thru 6)
2	5-7338	HUB, Driven Disc
3	5-3103	DISC, Driven
4	1-4523	WASHER, Thrust
5	3-2331	PLATE
6	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
7	5-2497	ASSEMBLY, Brake Lever (Includes Brake Lining & Rivet)
8	1-2313	RING, Retaining
9	9-0303	NUT, 1/4-28 Hex Top Lock
10	9-1294	WASHER, 1/4 Flat (3)
11	1-0916	SPACER
12	9-1504	SCREW, 1/4-28 x 1" Hex Head Cap
13	2-2371	SPRING, Brake Return
14	1-2264	SPRING, Clutch Brake
15	3-3292	LIFT, Yoke
16	1-1048	BEARING, Yoke (2)
17	1-1201	NUT, 5/16-24 Hex Center Lock (2)
18	9-0238	SCREW, 5/16-24 x 1" Hex Head Cap (2)
19	9-1198	SCREW, 3/8-16 x 5/8" Self-Tapping
20	3-3291	COLLAR, Yoke
21	1-1763	WASHER, 5/16 Flat (2)
22	3-4725	ARM, Yoke
23	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping (2)

CUTTING DECKS, DEFLECTORS

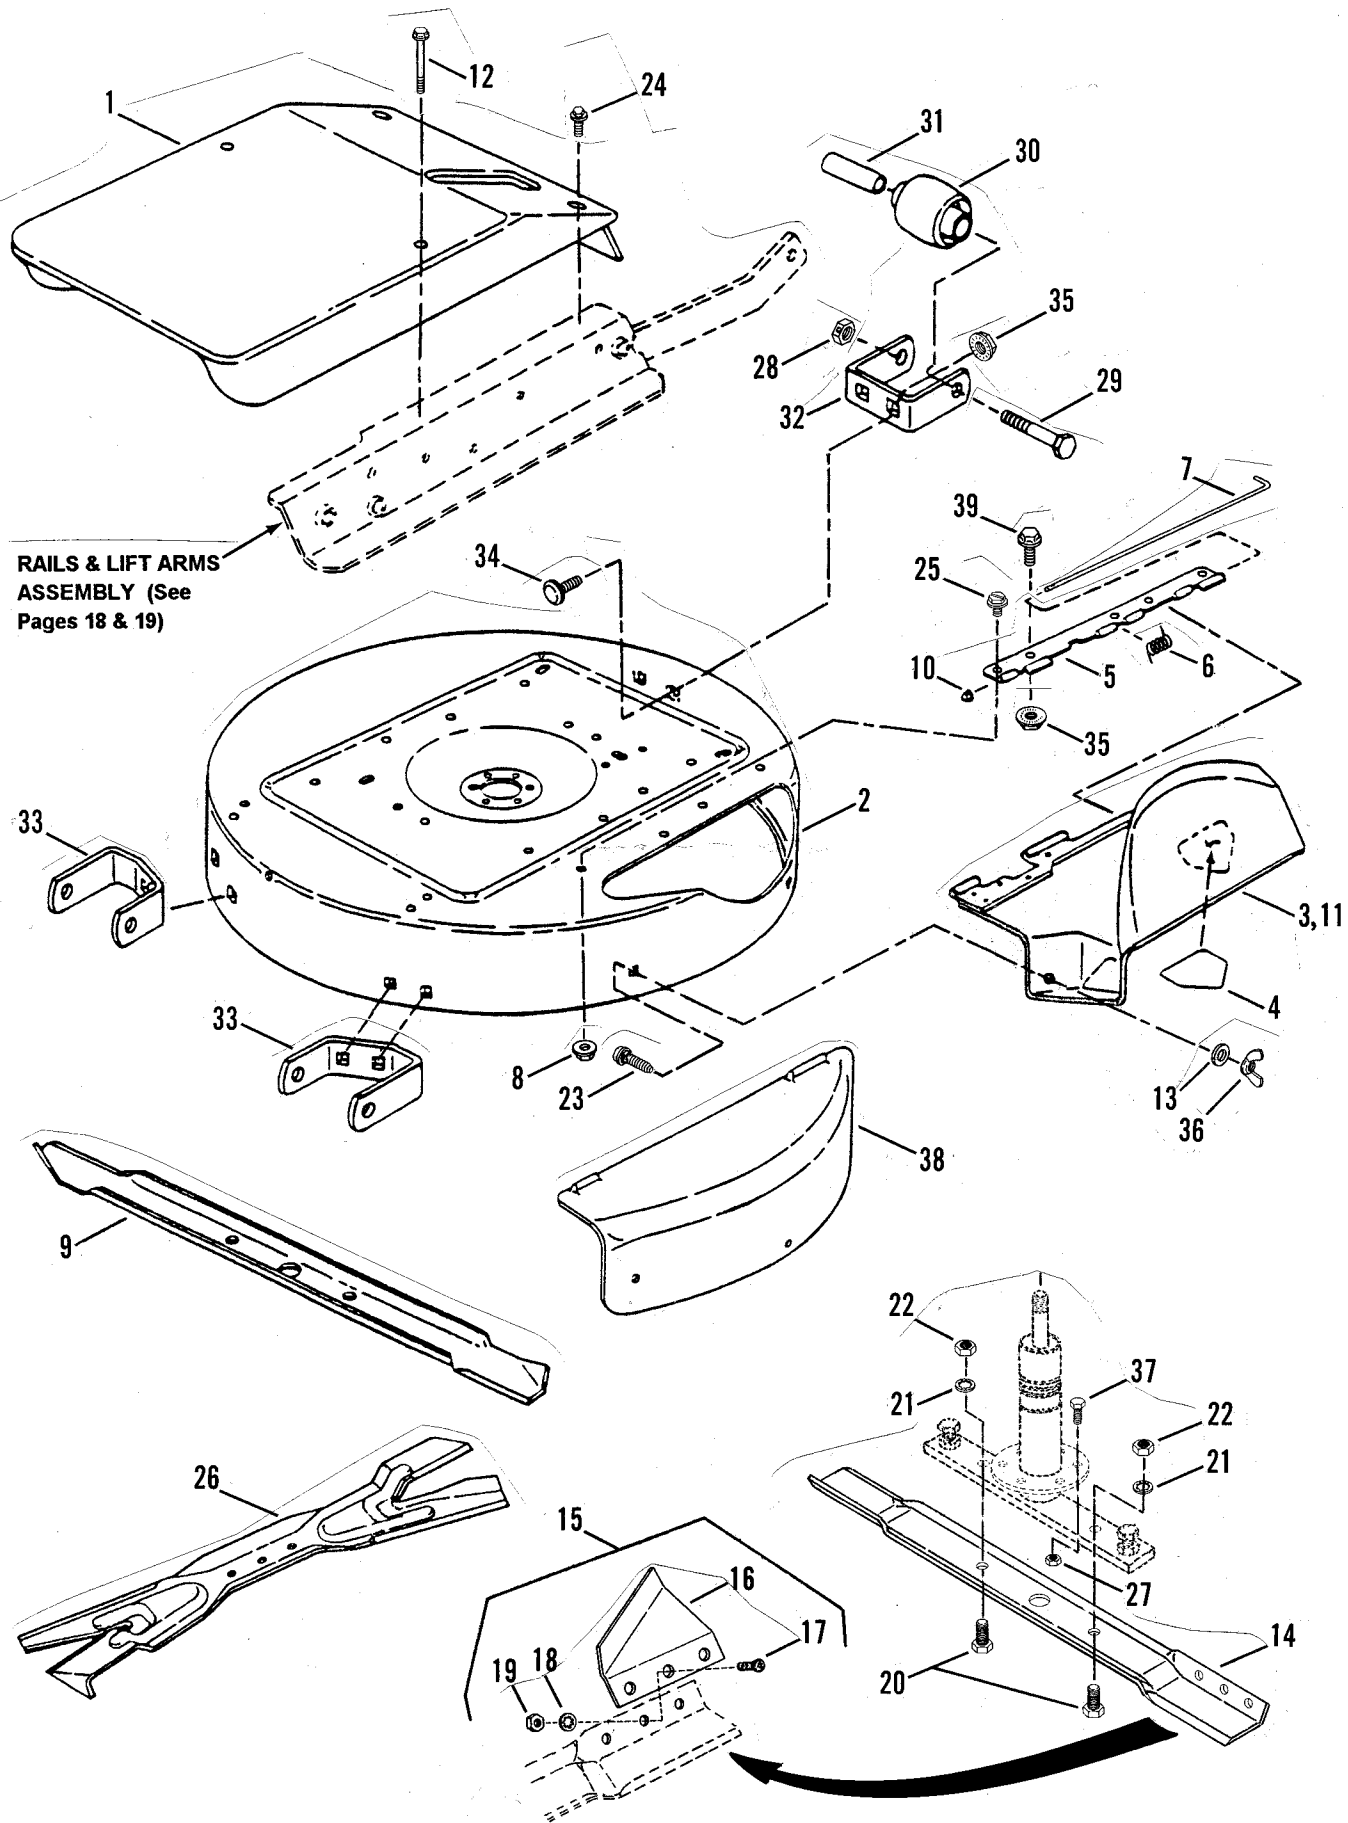

ITEM	PART NO.	DESCRIPTION
1	2-9989	COVER, Spindle
2	6-1221	25" DECK KIT
—	6-1809	28" DECK KIT
—	6-1225	33" DECK KIT
3	5-2555	DEFLECTOR, Discharge (28" & 33" Deck) (Includes Item 4)
4	2-2841	DECAL, DANGER (Cut Finger)
5	3-3780	HINGE, Deflector
6	1-6341	SPRING, Hinge
7	2-6234	PIN, Hinge
8	9-1070	NUT, 5/16-18 Hex Flange Lock
9	1-6967	BLADE, 25" Mulcher
—	1-6980	BLADE, 28" Mulcher
—	1-6982	BLADE, 33" Mulcher
10	2-6483	NUT, Push (2)
11	5-1976	DEFLECTOR, Discharge (25" Deck) (Includes Item 4)
—	5-7624	ASSEMBLY, Discharge (25" Deck) (Includes Items 4 Thru 9 & 11)
12	9-1015	SCREW, 1/4-20 x 3 1/2" Self-Tapping (2)
13	9-1296	WASHER, 5/16 Flat (2)
14	1-9518	25" BLADE
—	1-9515	28" BLADE
—	1-9523	33" BLADE
15	6-0480	KIT, Air Lift (25", 33" Models) (Includes 16 Thru 19)
16	3-7723	AIR-LIFT (2) (25", 33" Models)
17	9-0228	SCREW, 5/16-24 x 11/16" Machine (6)
18	9-0391	WASHER, 5/16-24 Internal Tooth Lock (6)
19	9-0223	NUT, 5/16-24 Hex (6)
20	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2)
21	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
22	9-0559	NUT, 1/2-20 Hex Jam (2)
23	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage (2)
24	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping (4)
25	9-1510	SCREW, 5/16-18 x 1/2" Self-Tapping (3)
26	2-9143	BLADE, Ninja, 25"
—	2-6453	BLADE, Ninja, 28"
—	2-4741	BLADE, Ninja, 33"
27	9-0613	NUT, 3/8-16 Hex Flange Lock (9)
28	3-3570	BRACKET, Gage Wheel (Front)
29	9-1532	SCREW, 3/8-24 x 3 3/4" Hex Head Cap (3)
30	1-9190	WHEEL, Gage (3)
31	1-5272	SPACER (3)
32	9-1518	NUT, 3/8-24 Hex Lock (3)
33	3-3571	BRACKET, Gage Wheel (Rear) (2)
34	9-0731	BOLT, 5/16-18 x 1/2" Short Neck Carriage (6)
35	9-1070	NUT, 5/16-18 Hex Flange Lock (8)
36	9-0492	NUT, 5/16-18 Wing (2)
37	9-0612	BOLT, 3/8-16 3/4" Hex Flange Lock (3)
38	1-6968	COVER, 25" Mulcher
—	1-6983	COVER, 28" Mulcher
—	1-6984	COVER, 33" Mulcher
39	9-0584	BOLT, 1/4-20 x 1/2" Hex Flange Lock


RAILS, LIFT ARMS, CAM LIFT (25", 28", & 33" MODELS)

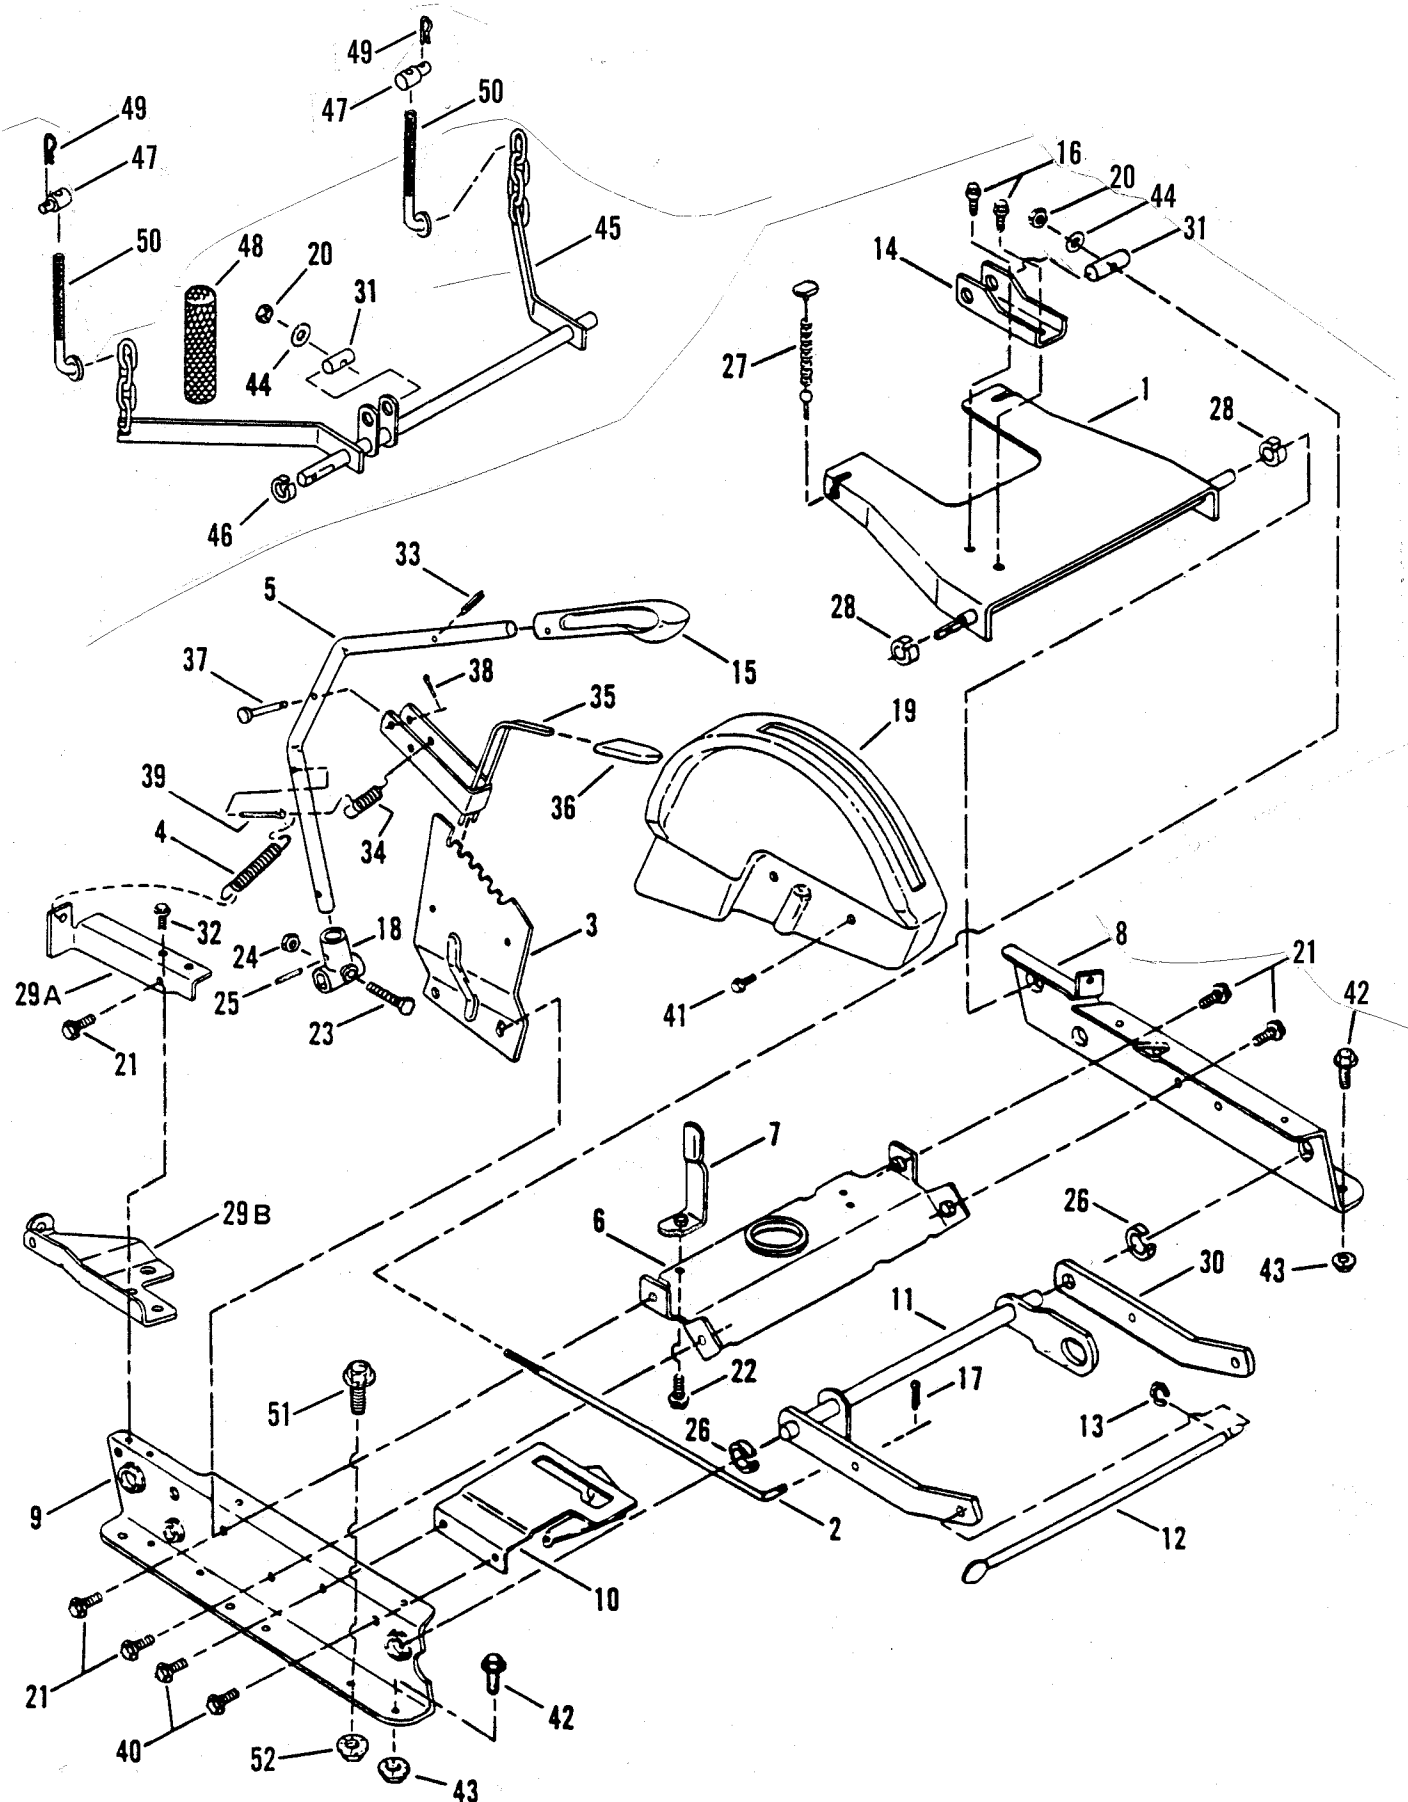

RAILS, LIFT ARMS, CAM LIFT (25", 28", & 33" MODELS)


ITEM	PART NO.	DESCRIPTION
1	4-1389	ARM, Rear Lift (25" Models Only)
2	1-6122	ROD, Leveling
3	3-3765	QUADRANT, Lift Lever
4	2-4914	SPRING, Extension
5	2-4878	LEVER, Lift
6	3-1838	BRACE, Top
7	3-1855	GUIDE, Belt
8	3-4918	RAIL, Left Hand
9	3-4919	RAIL, Right Hand
10	5-1310	ASSEMBLY, Clutch Plate
11	4-0685	ARM, Front Lift, Adjustable
12	2-2717	ROD, Support (Front Lift Arm to Front End)
13	1-7847	RING, 7/16 Retaining
14	3-3008	ARM, Leveling
15	2-3658	GRIP, Height Adjustment Lever
16	9-1001	SCREW, 5/16-18 x 5/8" Self-Tapping (Torx) (2)
17	9-0365	PIN, 1/8 x 3/4" Cotter
18	2-5049	HUB, Deck Lift
19	2-6394	COVER, Height of Cut
20	9-0854	NUT, 3/8-24 Hex Nyloc
21	9-1198	SCREW, 3/8-16 x 5/8" Self-Tapping (6)
22	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping
23	9-1164	BOLT, 5/16-24 x 1 5/8" Tapered Axle
24	9-0480	NUT, 5/16-24 Hex Flange Lock
25	1-3550	PIN, 3/16 x 1" Roll
26	1-2067	RING, Red (2)
27	2-7429	CABLE, Rear Deck
28	2-2112	RING, White
29A	2-4762	BRACKET, Deck Lift (25" Models Only)
29B	3-4695	BRACKET, Lift Assist (28" & 33" Models)
30	3-2997	ARM, Front Lift (Left Side)
31	3-4213	PIVOT, Leveling
32	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping
33	9-0844	PIN, 3/16 x 3/4" Roll
34	2-6292	SPRING, Latch
35	4-1470	LATCH
36	2-6286	GRIP, Lift Latch
37	1-1021	PIN, 1/4 x 1 1/4" Clevis
38	9-0360	PIN, 1/16 x 3/4" Cotter
39	9-0753	PIN, 3/16 x 1 1/2" Cotter
40	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping
41	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping
42	9-0606	BOLT, 5/16-18 x 5/8" Hex Flange Lock
43	9-0585	NUT, 5/16-18 Hex Flange Lock
44	9-0122	WASHER, 3/8 Flat
45	4-1627	ARM, Rear Lift (28" & 33" Models)
46	1-2068	RING Blue
47	2-8200	SWIVEL
48	2-8021	COVER, Chain
49	9-1503	PIN, 3/32 x 1 1/2" Hair
50	2-8728	HOOK, Chain (2)
51	9-0584	BOLT, 1/4-20 x 1/2" Hex Flange Lock
52	9-0583	NUT, 1/4-20 Hex Flange Lock

BLADE STOP PEDALS

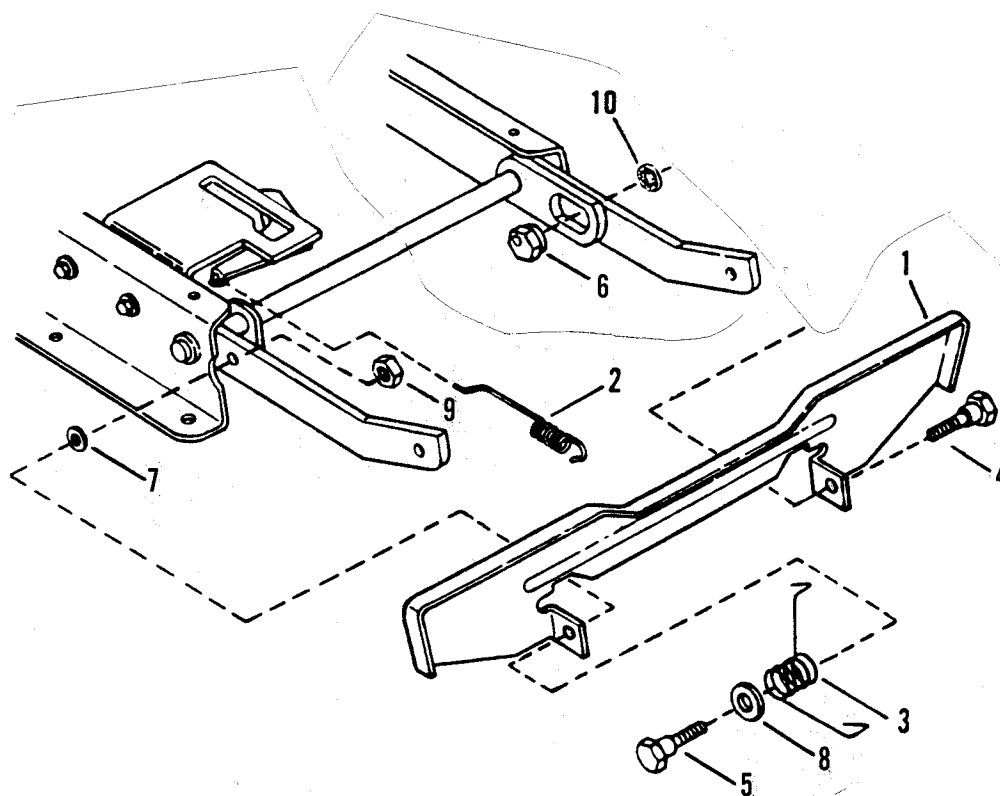

ITEM	PART NO.	DESCRIPTION
1	3-3601	PEDAL, Blade Stop Control
2	3-5669	SPRING, Latching
3	1-5448	SPRING, Pedal
4	1-5495	BOLT, 3/8-24 x 3/4" Shoulder
5	1-5446	BOLT, 3/8-24 x 9/16" Shoulder
6	1-5447	ECCENTRIC, Leveling
7	9-0122	WASHER, 3/8 Flat
8	9-0250	WASHER, 1/2 Flat (2)
9	9-0289	NUT, 3/8-24 Hex Lock
10	9-0390	WASHER, 3/8 Internal Tooth Lock

BELTS, BRAKES, INTERLOCK (25" MODELS)

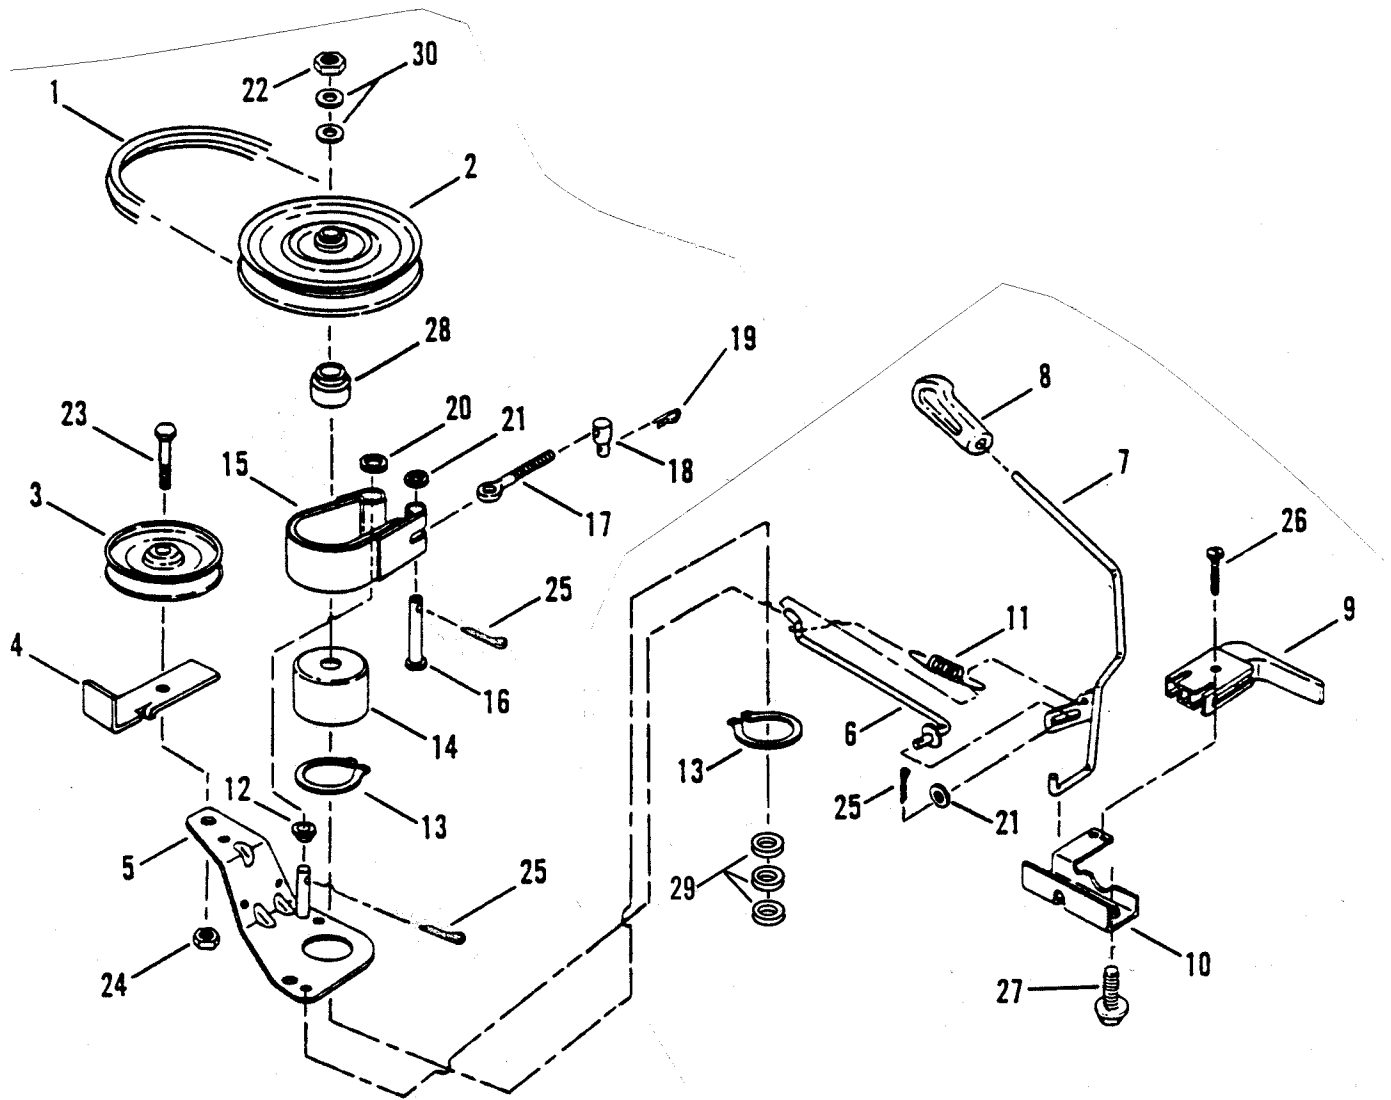


ITEM PART NO. DESCRIPTION

1	2-2252	BELT, Drive
2	1-8781	PULLEY, Spindle
3	2-9624	PULLEY, Idler
4	3-2111	RESTRICTOR, Belt
5	4-7787	ARM, Idler
6	1-2055	ROD, Idler
7	4-1324	HANDLE, Blade Lever (On - Off)
8	2-3657	GRIP, Handle
9	1-8524	SWITCH, Deck Interlock
10	3-8021	MOUNT, Handle
11	1-4168	SPRING, Blade Handle
12	1-4314	SPACER
13	1-0740	RING, Retainer (2)
14	3-5378	DRUM, Brake
15	3-4852	BAND, Brake

ITEM PART NO. DESCRIPTION


16	1-4304	PIN, 1/4 x 1 5/8" Clevis
17	2-9244	BOLT, 5/16-18 x 3" Eye
18	2-8200	SWIVEL, Adjustable 1.6
19	1-5067	PIN, 3/32 x 1 1/2" Hair
20	9-0122	WASHER, 3/8 Flat
21	9-0055	WASHER, 1/4 Flat
22	1-0027	NUT, 3/4-16 Hex Jam
23	9-1517	SCREW, 3/8-24 x 1 3/4" Hex Cap
24	9-1518	NUT, 3/8-24 Hex Lock
25	9-0037	PIN, 3/32 x 3/4" Cotter (3)
26	9-0299	SCREW, #10-32 x 1" Self-Tap
27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
28	1-5290	HUB, Pulley
29	1-0935	WASHER, Spindle (3)
30	3-2027	WASHER, 49/64 x 1 1/2" Flat (2)

BELTS, BRAKES, INTERLOCK (28" & 33" MODELS)

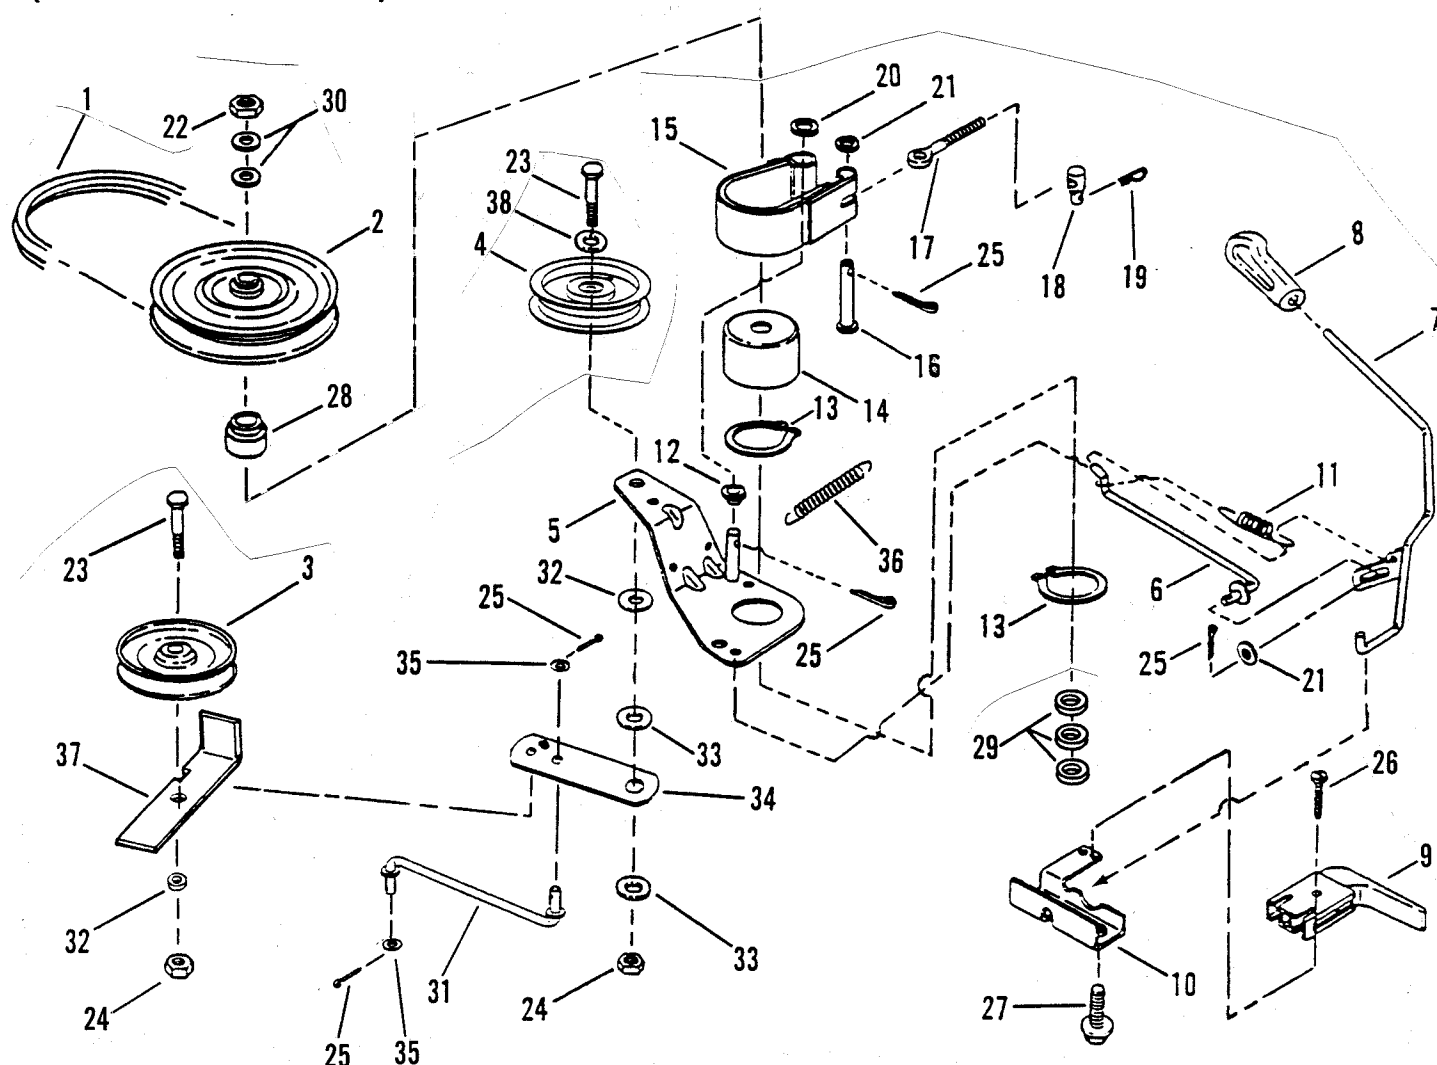


ITEM	PART NO.	DESCRIPTION
1	2-8619	BELT, Drive
2	1-8781	PULLEY, Spindle
3	2-9624	PULLEY, 4" Idler
4	1-8574	IDLER, 4 1/8" Flat
5	4-7787	ARM, Idler
6	1-2055	ROD, Idler
7	4-1324	HANDLE, Blade Lever (On - Off)
8	2-3657	GRIP, Handle
9	1-8524	SWITCH, Deck Interlock
10	3-8021	MOUNT, Handle
11	1-4168	SPRING, Blade Handle
12	1-4314	SPACER
13	1-0740	RING, Retainer (2)
14	3-5378	DRUM, Brake
15	3-4852	BAND, Brake
16	1-4304	PIN, 1/4 x 1 5/8" Clevis
17	2-9244	BOLT, 5/16-18 x 3" Eye
18	2-8200	SWIVEL
19	1-5067	HAIRPIN, 3/32 x 1 1/2"

ITEM	PART NO.	DESCRIPTION
20	9-0122	WASHER, 3/8 Flat
21	9-0055	WASHER, 1/4 Flat
22	1-0027	NUT, 3/4-16 Hex Jam
23	2-7174	SCREW, 5/16-18 x 2" Hex Cap (2)
24	9-1575	NUT, 5/16-18 Center Lock (2)
25	9-0037	PIN, 3/32 x 3/4" Cotter (4)
26	9-0299	SCREW, #10-32 x 1" Self-Tap
27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
28	1-5290	HUB, Pulley
29	1-0935	WASHER, Spindle (3)
30	3-2027	WASHER, 49/64 x 1 1/2" Flat (2)
31	2-8578	LINK
32	1-3849	SPACER, 21/64 x 5/8 x 5/32"
33	1-6314	WASHER, 21/64 x 1 1/4 x 3/32"
34	3-5229	LINK, Idler
35	9-1514	WASHER, 3/8 x 13/16" Flat (2)
36	2-3666	SPRING
37	3-2111	RESTRICTOR
38	9-1296	WASHER

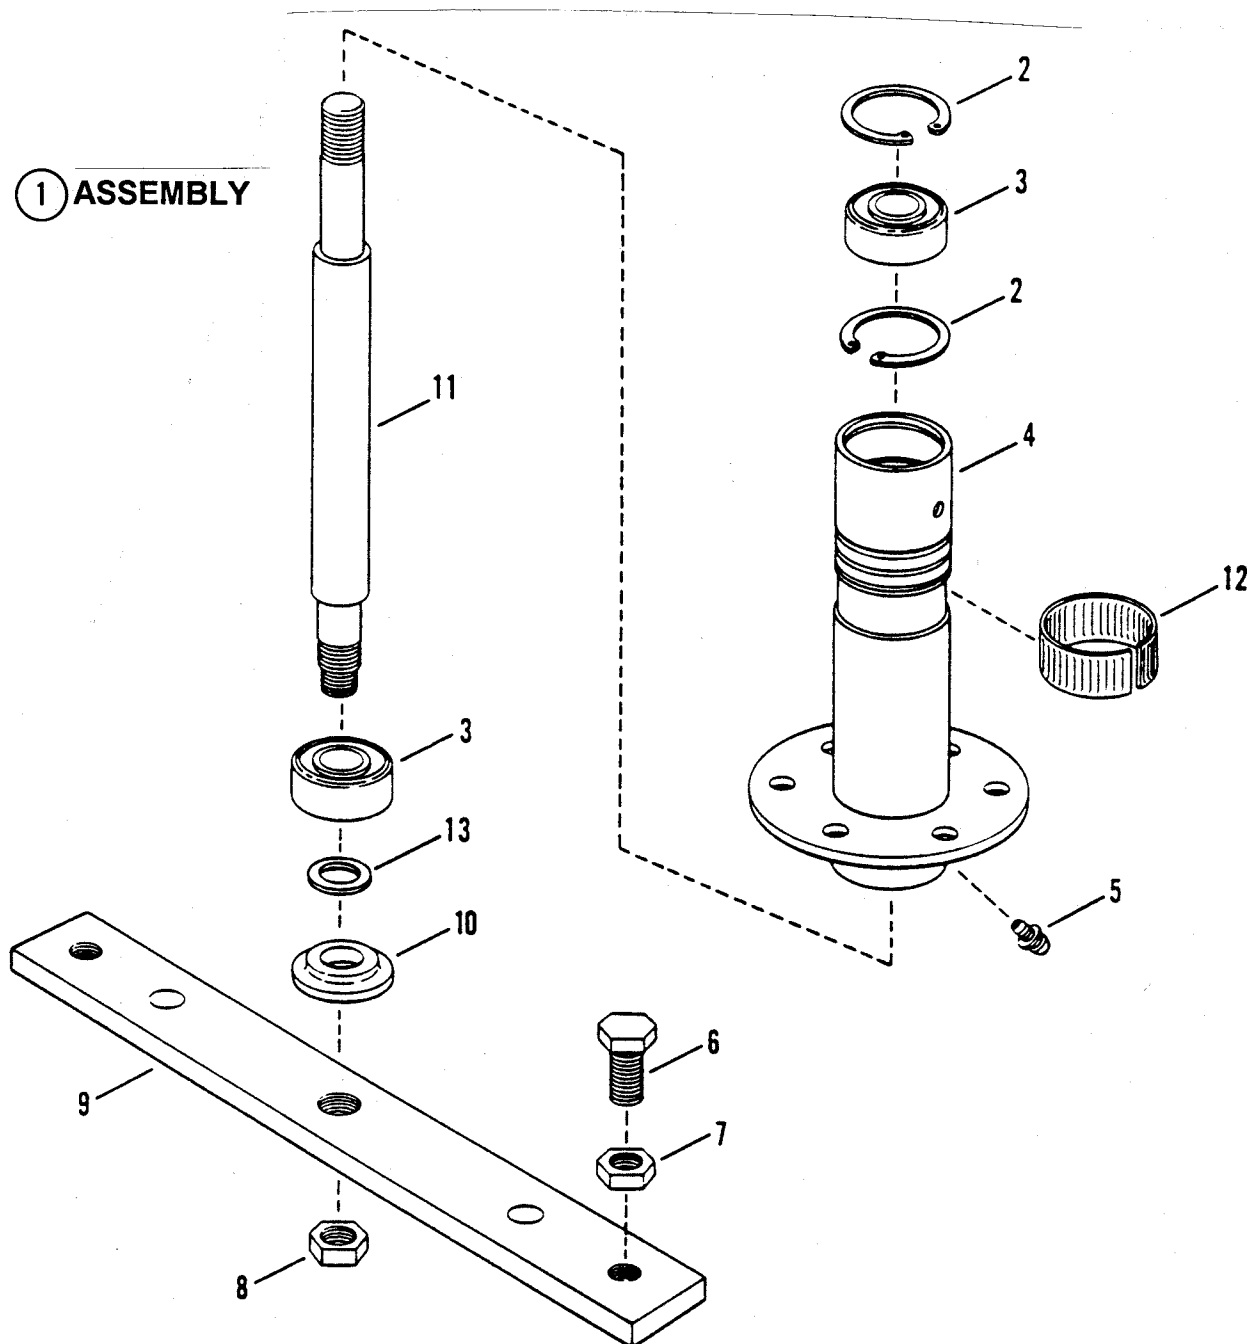


ITEM	PART NO.	DESCRIPTION
1	5-9813	ASSEMBLY, Spindle Housing (Includes Items 2 Thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-0696	HOUSING, Spindle (Includes Item 5)
5	1-0817	FITTING, Lube
6	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2) (GR. 5)
7	9-0559	NUT, 1/2-20 Hex Jam (2)
8	9-0356	NUT, 5/8-18 Hex Lock
9	3-7751	HOLDER, Blade
10	1-4407	WASHER, Spindle
11	2-1742	SPINDLE
12	1-2670	RING, Tolerance
13	1-0121	WASHER, 3/4 Shim

DRIVE DISC ASSEMBLY

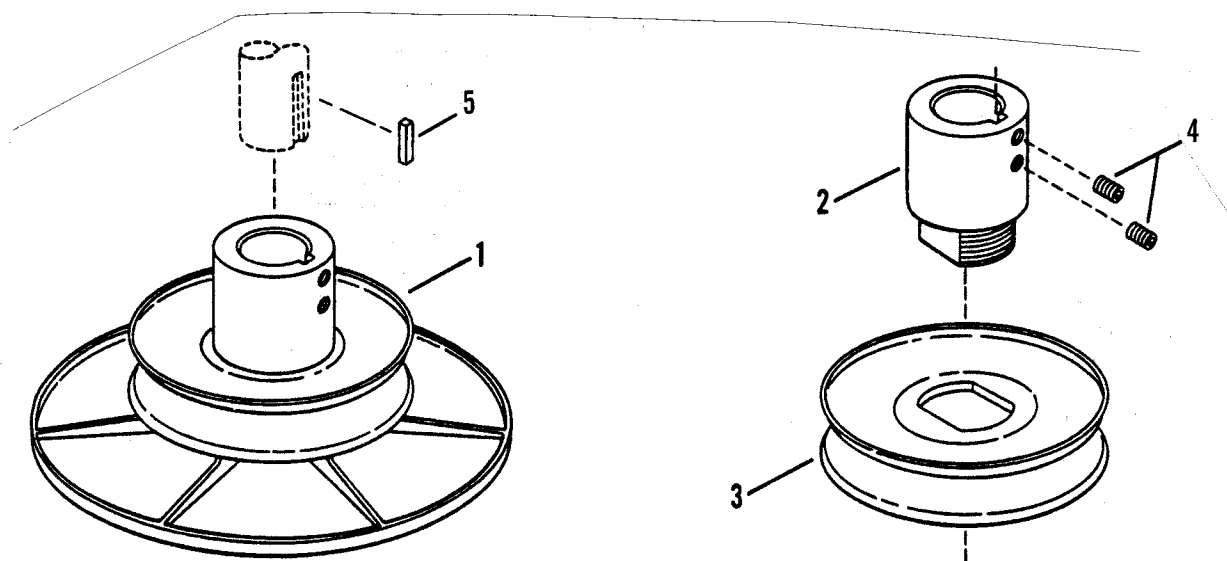

ITEM	PART NO.	DESCRIPTION
1	5-3708	ASSEMBLY, 4" O.D. Drive Disc (33" Models) (Includes Items 2 Thru 4)
-	5-3709	ASSEMBLY, 5" O.D. Drive Disc (25" & 28" Models) (Includes Items 2 Thru 4)
2	2-9112	HUB
3	2-8779	PULLEY, Drive (25" & 28" Models)
-	2-8796	PULLEY, Drive (33" Models)
4	9-0132	SCREW, 3/8-16 x 3/8" Set (2)
5	1-0210	KEY, 1/4" Square x 2"


FUEL TANK & OPERATORS SEAT

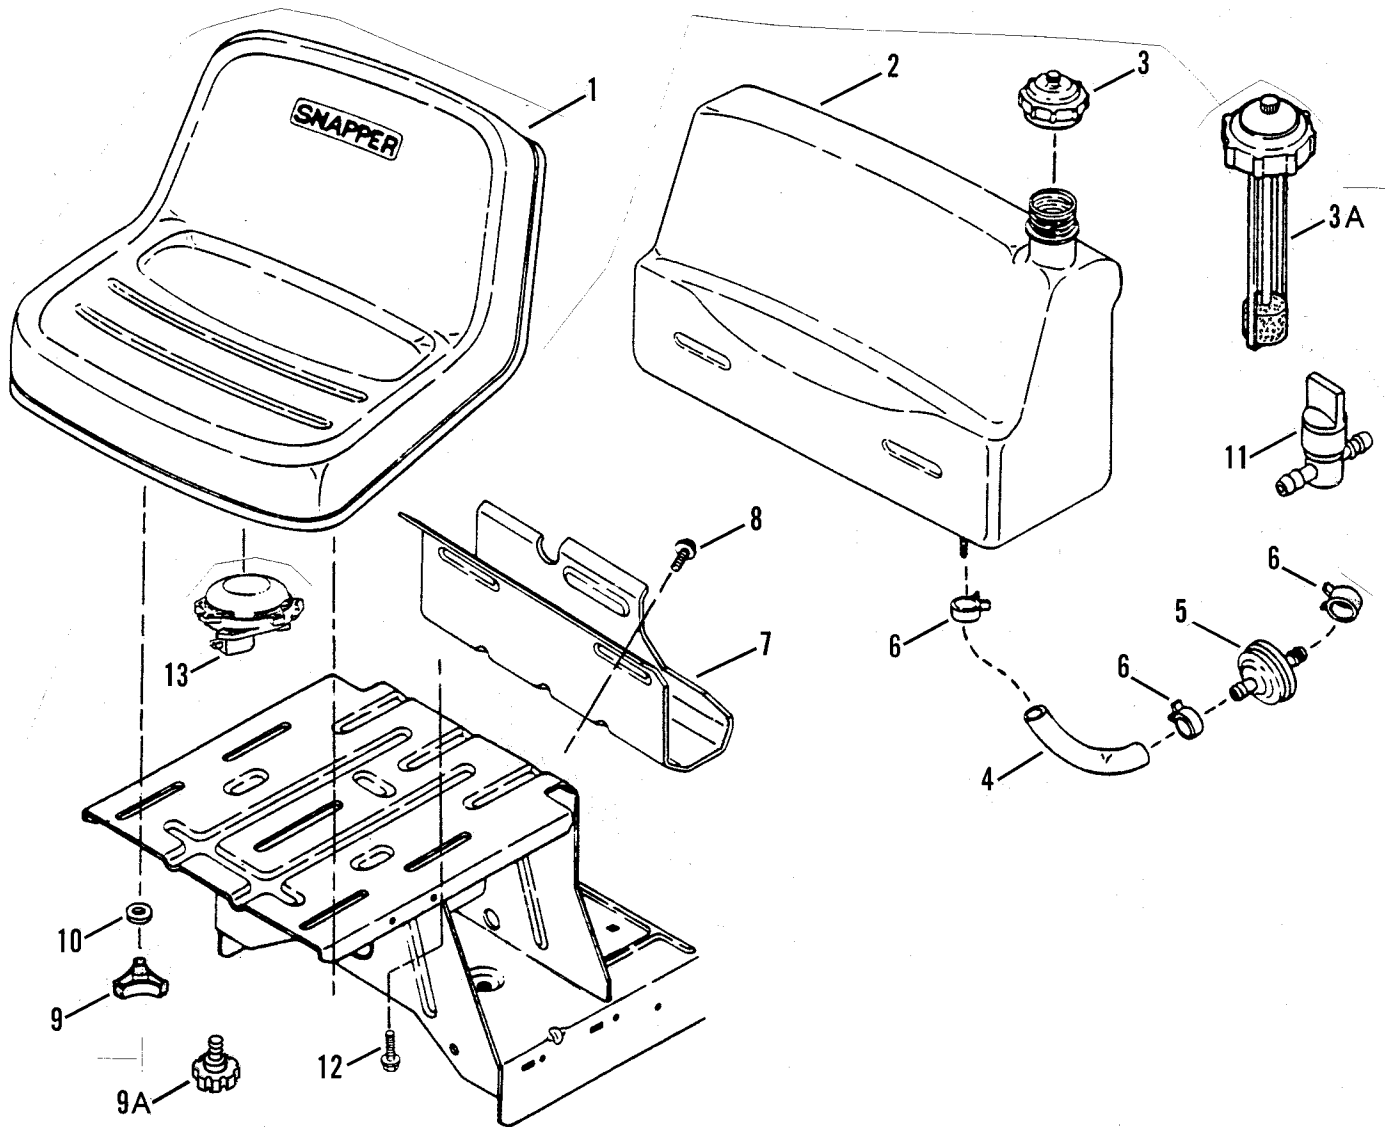


ITEM	PART NO.	DESCRIPTION
1	2-8595	SEAT, Operator
2	5-1905	ASSEMBLY, Fuel Tank (Includes Item 3)
-	5-2435	ASSEMBLY, Fuel Tank With Gauge (Includes Item 3A)
3	1-2515	CAP, Fuel Tank w/gauge
3A	1-9377	CAP, Fuel Tank With Gauge
4	3-2015	HOSE, Fuel (7" Long)
-	3-2038	HOSE, Fuel (5" Long)
-	7-6272	HOSE, Fuel (8 1/2" Long)
-	1-2912	HOSE, Fuel (12 1/2" Long) (Kohler Only)
5	1-4359	FILTER, Fuel (In-Line)
6	1-2222	CLAMP, Fuel Line (4)
7	3-3377	BRACKET, Fuel Tank (Rear)
8	9-1542	SCREW, 5/16-18 x 5/8" Self-Tapping (2)
9	2-3191	KNOB, Seat Adjusting (25" & 28" Models) (2)
9A	2-8659	KNOB (2), Hinged Seat
10	1-3849	SPACER, 5/16 (33" Models) (2)
11	2-4507	VALVE, Fuel Shut-Off (Accessory)
12	9-1038	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)
13	2-9211	SWITCH, Seat (25" & 28" Models)

ENGINES & EXHAUST MUFFLER

ENG. H.P.	START TYPE	ENGINE MFGR.	MFGR. MODEL	MFGR. TYPE
8.0	ELECTRIC	BRIGGS & STRATTON	195707	0143-01
10.0	ELECTRIC	BRIGGS & STRATTON	28A207	0121-01
13.0	ELECTRIC	BRIGGS & STRATTON	28M707	0113-01
14.0	ELECTRIC	KOHLER	CV14ST	PS-1473

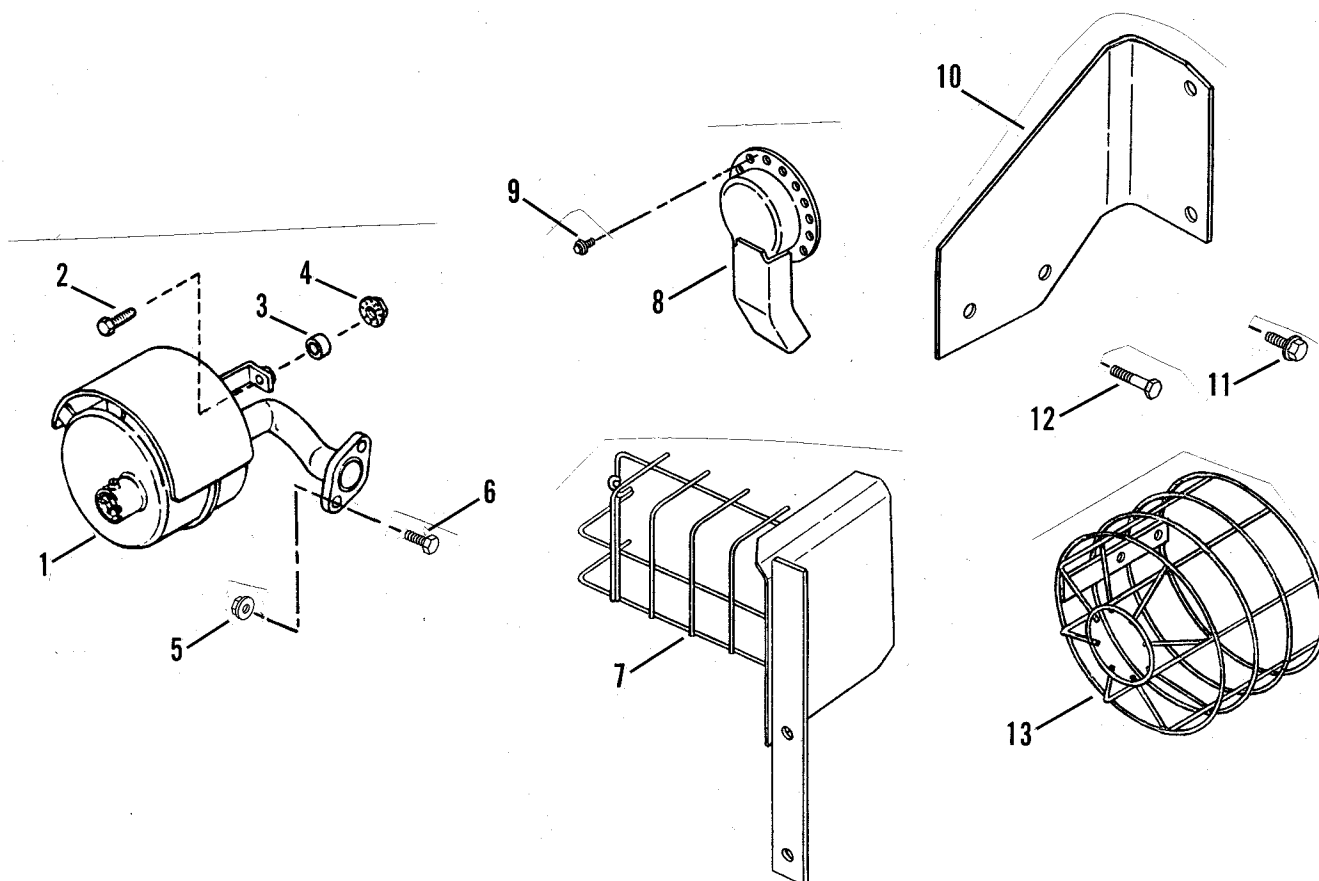

ITEM	PART NO.	DESCRIPTION
1	1-9358	MUFFLER (Kohler Engine)
2	9-1495	SCREW, 1/4-20 x 3/4" Hex Head Cap (Kohler Engine)
3	1-3849	SPACER
4	9-1065	NUT, 1/4-20 Hex Flange Lock
5	9-1070	NUT, 5/16-18 Hex Flange Lock (2)
6	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap (2)
7	2-4092	GUARD, Muffler (Briggs Engines)
8	4-1367	DEFLECTOR, Heat (28" Model - Briggs Engine)
9	9-1581	SCREW, #8-18 x 1/2" Self-Tapping (28" Model - Briggs Engine) (10)
10	3-3564	BRACKET, Muffler Guard
11	9-1016	SCREW, 1/4-20 x 5/8" Hex Head, Self-Tapping (Kohler Engine) (2)
12	9-1059	SCREW, 1/4-20 x 1" Hex Head Cap, Grade 5 (Kohler Engine) (2)
13	2-4356	GUARD, Muffler (Kohler Engine)

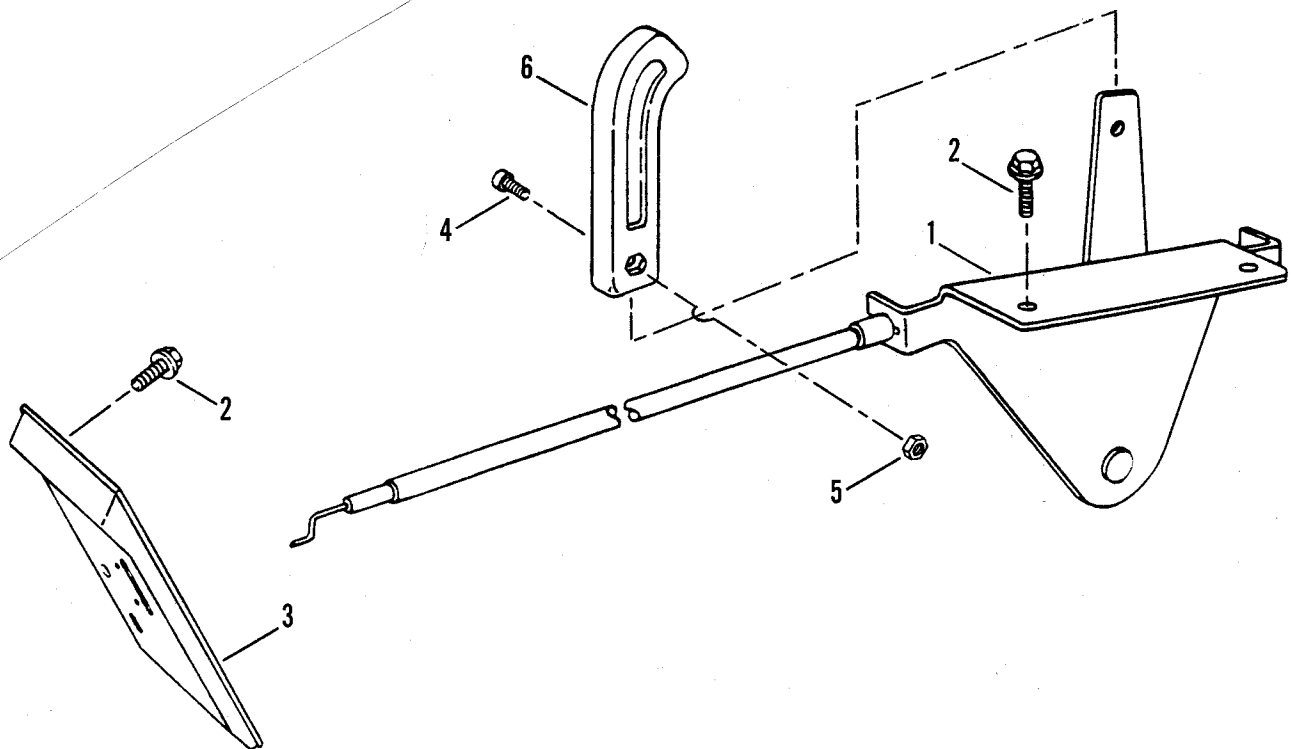

ITEM	PART NO.	DESCRIPTION
1	2-4155	CONTROL, Throttle (Briggs)
—	2-2483	CONTROL, Throttle (Kohler)
2	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (Torx) (5)
3	2-3665	COVER, Dash Panel (Electric Start)
4	9-1017	SCREW, #8-32 x 3/8" Cross Recessed Fillister Head (2)
5	9-1018	NUT, #8-32 Hex (2)
6	2-3655	KNOB, Throttle Control

(For 8 HP Without Recoil Back-Up)




ELECTRICAL SYSTEMS
(For 8 HP Without Recoil Back-Up)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs)
4	1-9297	HARNESS, Ignition Wiring (Briggs)
5	1-6168	HOLDER, Fuse (Includes Fuse)
-	1-6169	FUSE (10 AMP)
6	2-2886	SWITCH, Traction Operator's Presence
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	2-2880	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8843	HARNESS, Operator Presence Control Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	2-9211	SWITCH, Seat

ELECTRICAL SYSTEMS


(For 10 & 13 HP)

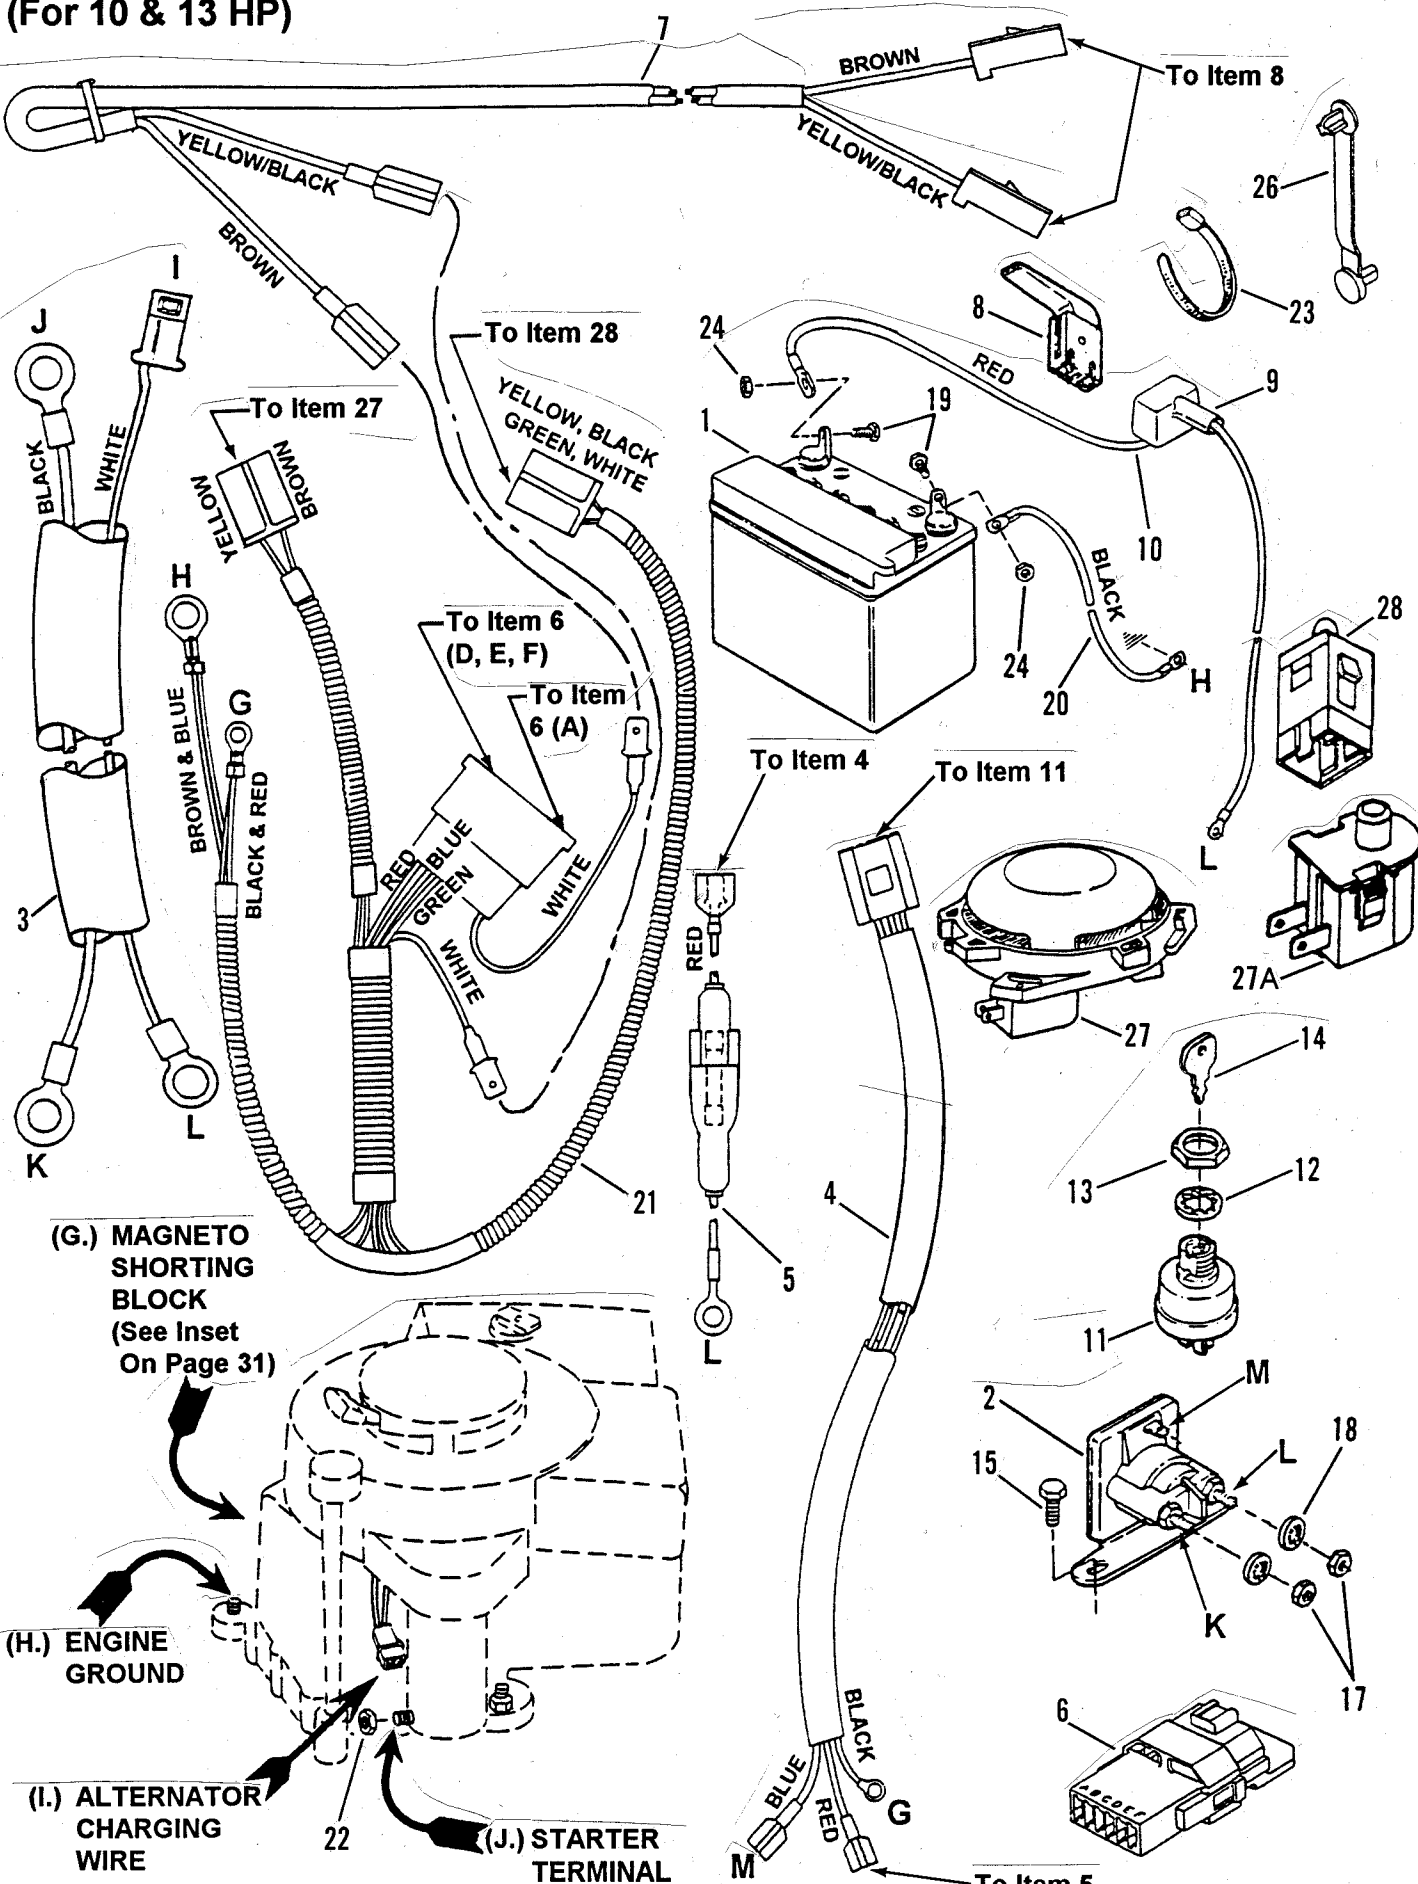

ELECTRICAL SYSTEMS


(For 10 & 13 HP)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12Volt Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs Engines)
4	1-9297	HARNESS, Ignition Wiring (Briggs Engines)
5	1-6168	HOLDER, Fuse (Includes Fuse)
—	1-6169	FUSE (10 AMP)
6	2-8606	INTERLOCK Module (Briggs)
7	2-8386	HARNESS (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	2-2880	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8607	HARNESS, Operator Presence Control (OPC) Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
26	1-4451	TIE, 2" Long Cable
27	2-9211	SWITCH, Seat (8 HP & 10 HP Engines)
27A	2-3354	SWITCH, Seat (13 HP Engines)
28	2-2886	SWITCH, Operator Presence Control (OPC) Traction

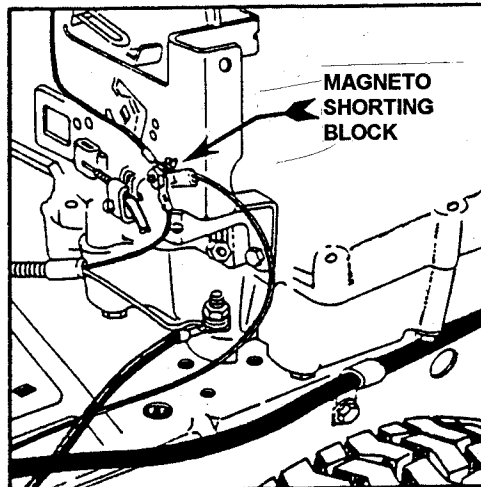


ELECTRICAL SYSTEMS

(For 14 HP Kohler)

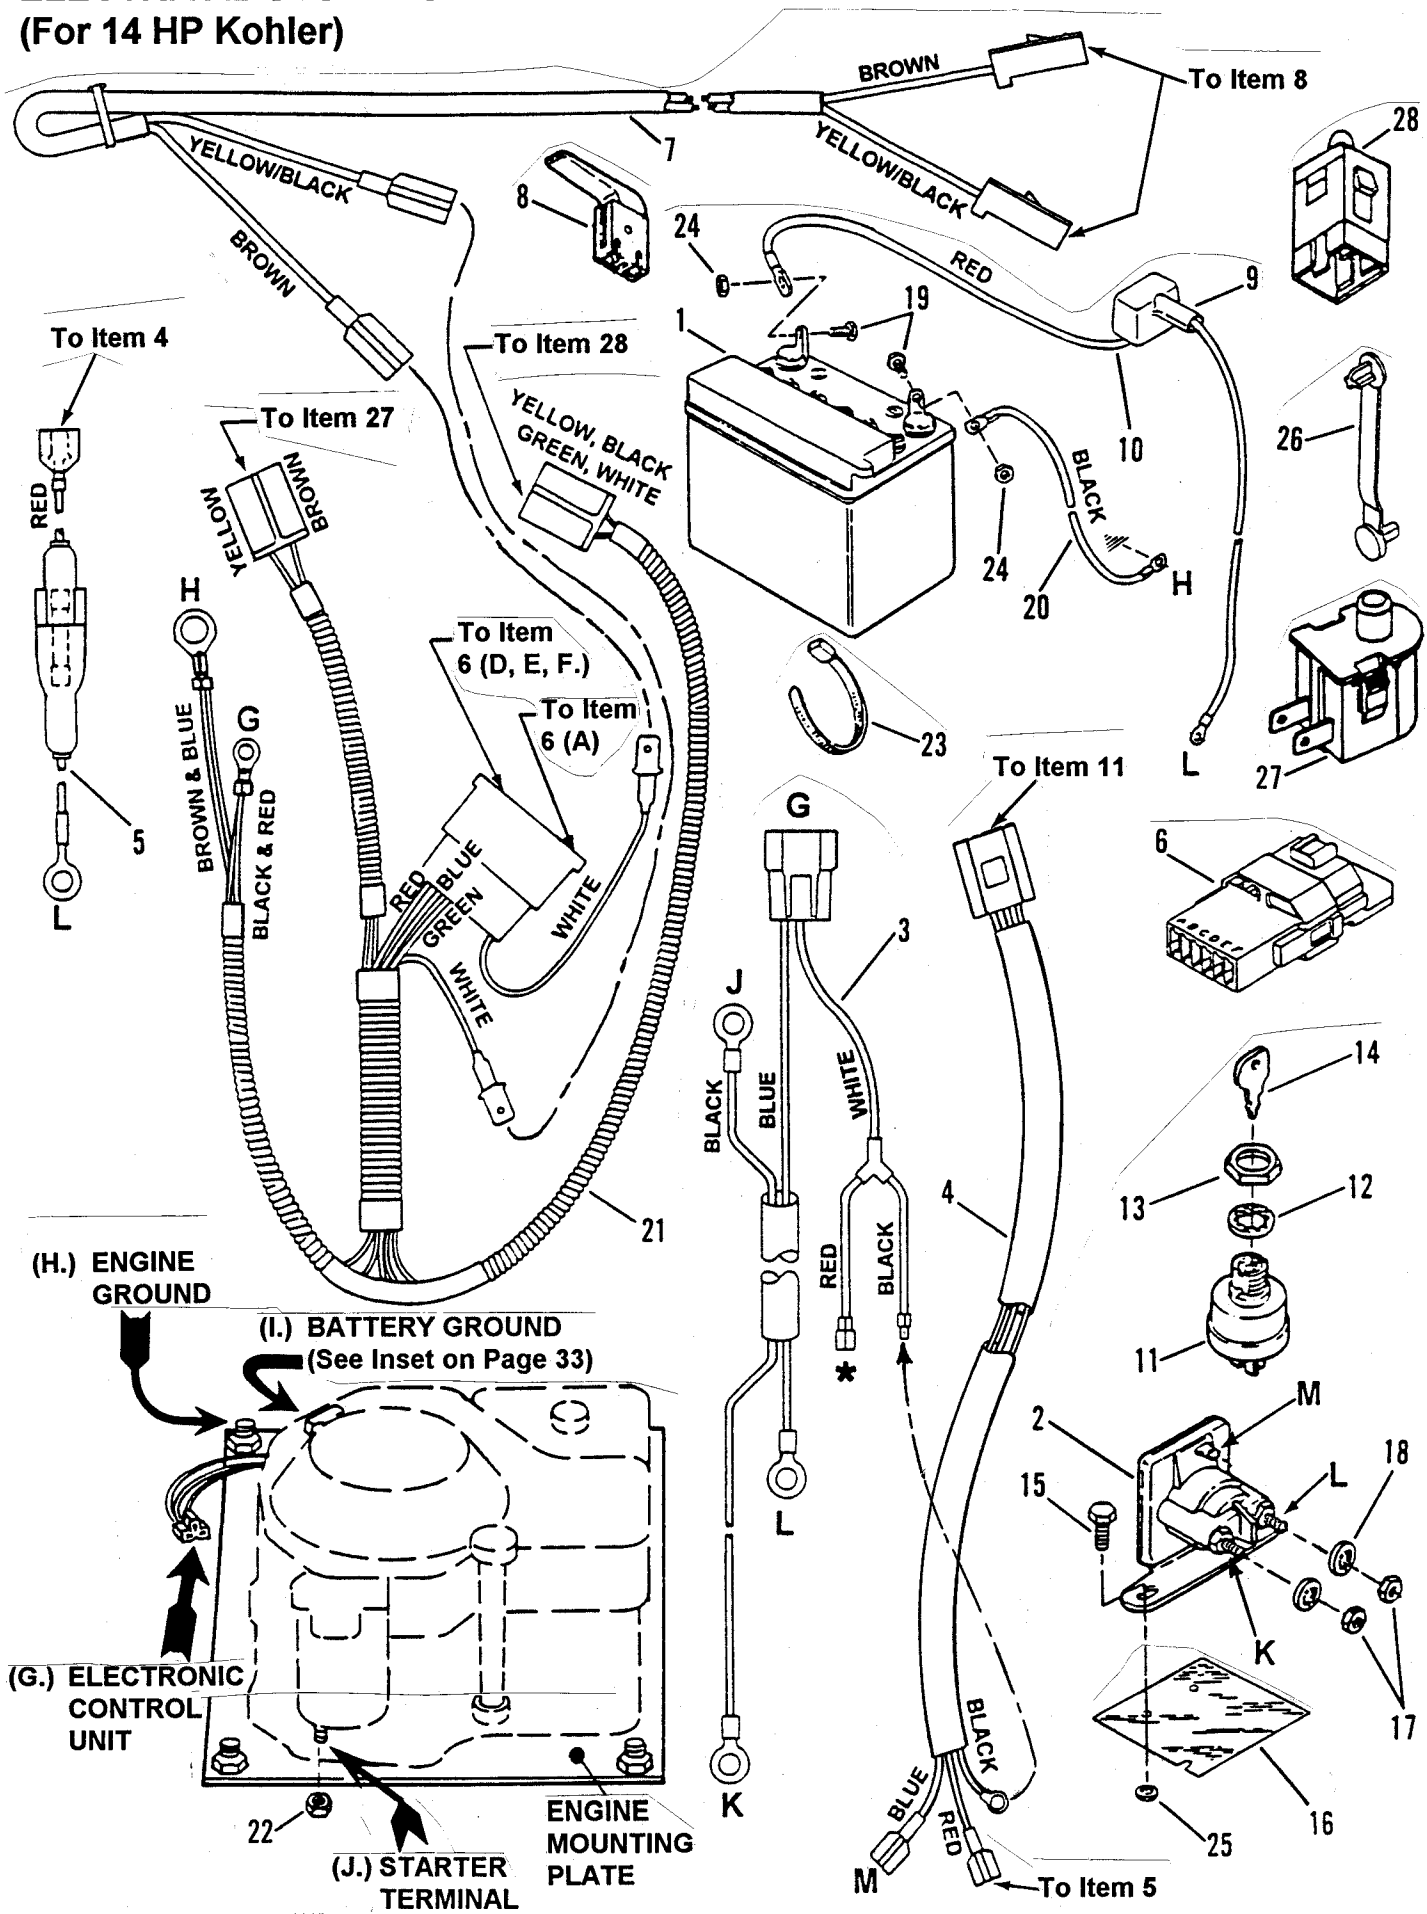


ELECTRICAL SYSTEMS (For 14 HP Kohler)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	1-9321	HARNESS, Starter Wiring
4	1-9322	HARNESS, Ignition Wiring
5	1-6168	HOLDER, Fuse (Includes Fuse)
—	1-6169	FUSE (10 AMP)
6	2-8677	INTERLOCK Module
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	2-2880	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8678	HARNESS, Operator Presence Control (OPC) Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	2-3354	SWITCH, Seat
28	2-2886	SWITCH, Operator Presence Control Traction
29	9-0299	SCREW, #10-32 x 1" Self-Tapping
30	9-0913	SCREW, #10-24 x 1/2" Self-Tapping Torx (3)

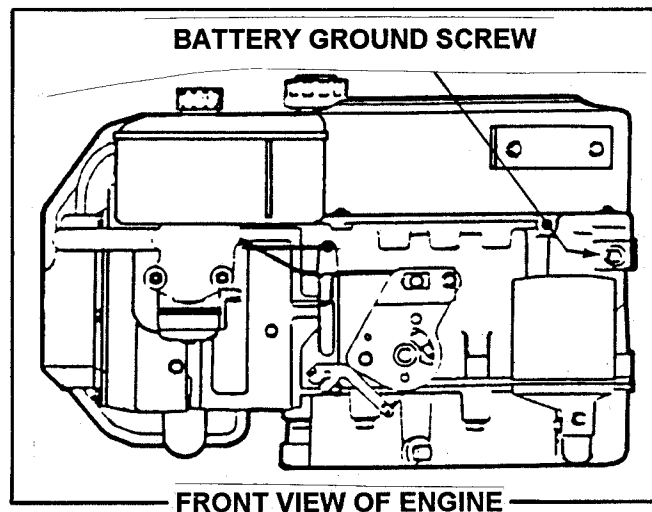


SNAPPER REAR ENGINE RIDER ACCESSORIES

PART NO.	DESCRIPTION OF KIT	MODELS USED ON
6-0517	Wheel Weight (8" Wheels)	All Rear Engine Riders
6-0601	Smooth Start Clutch	All Rear Engine Riders
6-0697	Dump Cart	All Rear Engine Riders
6-0737	Gauge Wheel	All 33" Deck Rear Engine Riders
6-0941	Single Bag Catcher	All 25" Deck Rear Engine Riders
6-0943	Single Bag Catcher	All 28" & 33" Deck Rear Engine Riders
6-0946	Twin Bag Catcher	All 28" & 33" Deck Rear Engine Riders
6-0947	Bag-N-Wagon	All 28" & 33" Deck Rear Engine Riders
6-0948	Thatcherizer	All Series 7 & Newer Riders
6-0964	Wagon Cover	All 28" & 33" Deck Rear Engine Riders
6-1190	Weight (Front)	All Series 7 & Newer Riders
6-0959	Dozer Blade (36" Blade)	All Rear Engine Riders
6-0357	Tire Chains (Tires-16 x 6.50-8)	All Rear Engine Riders
6-0357	Tire Chains (Tires-16 x 4.80-8)	All Rear Engine Riders
6-1049	Ninja Recycling (Cover)	All 25" Deck Rear Engine Riders
6-1253	Ninja Recycling (Cover)	All 28" Deck Rear Engine Riders
6-1255	Ninja Recycling (Cover)	All 33" Deck Rear Engine Riders

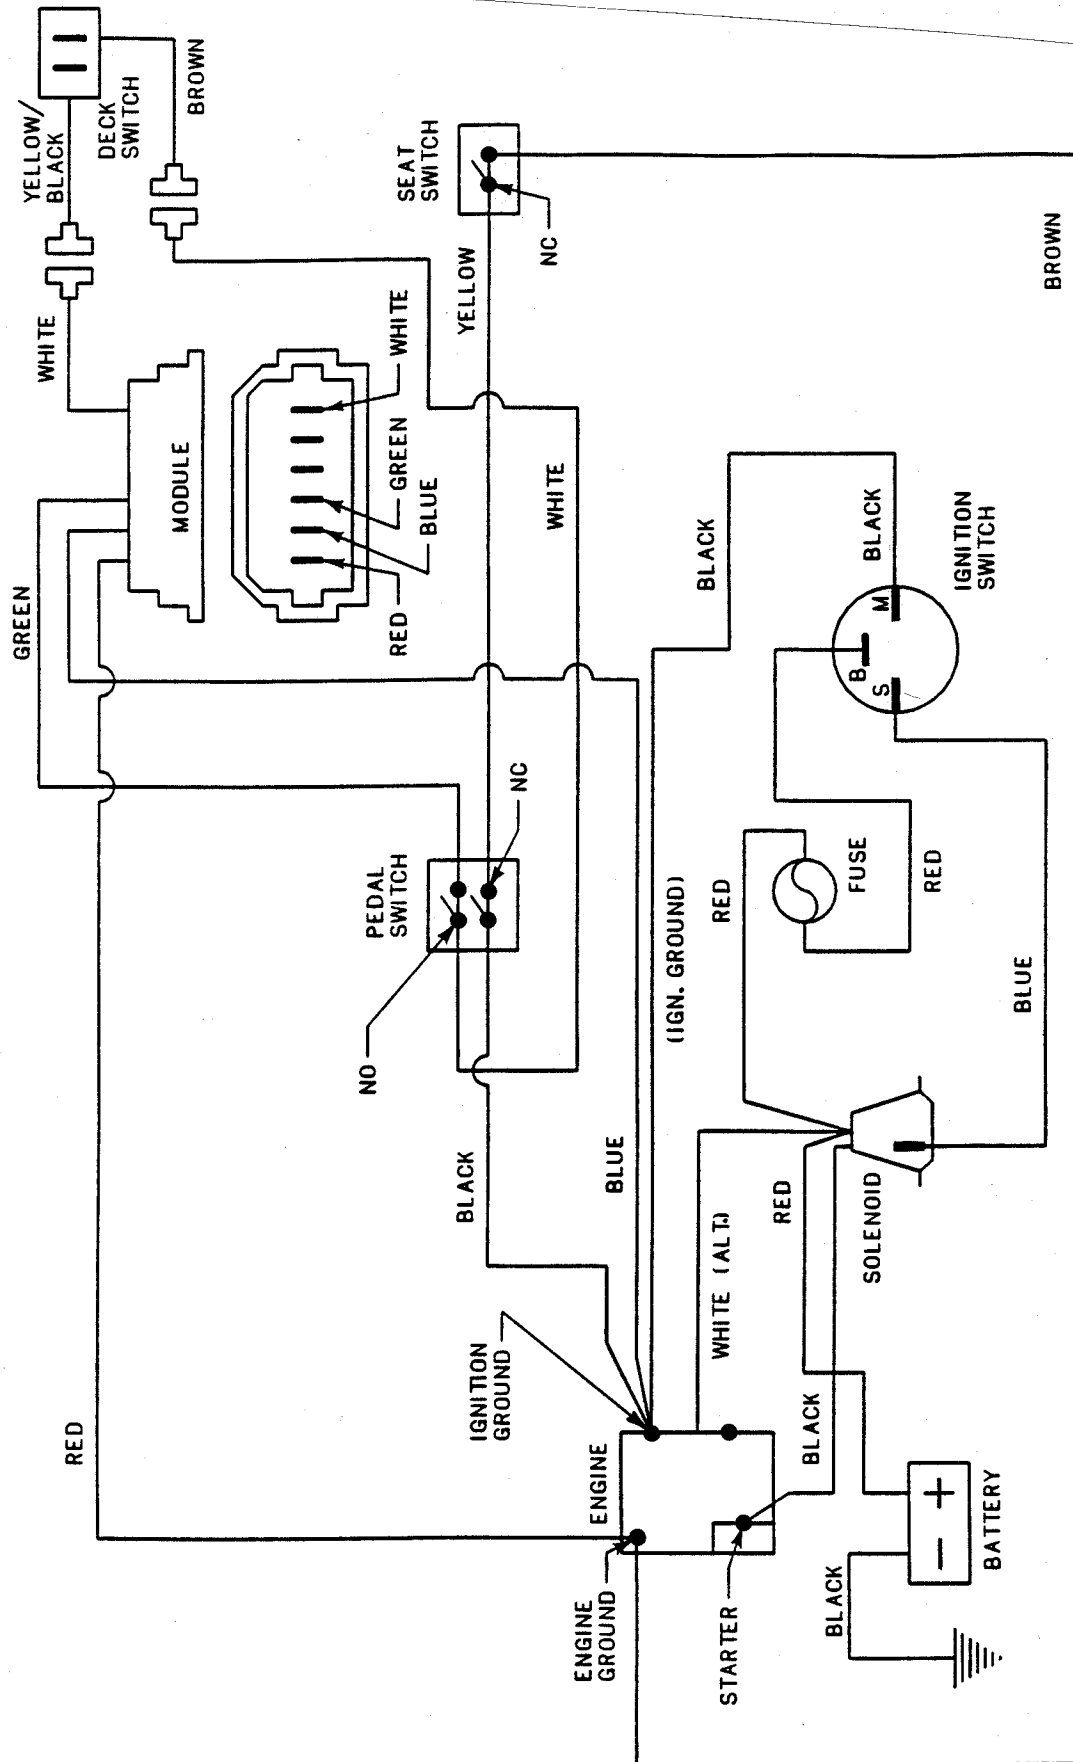

WIRING SCHEMATIC FOR 10 & 13 HP BRIGGS ENGINES

WIRING SCHEMATICS

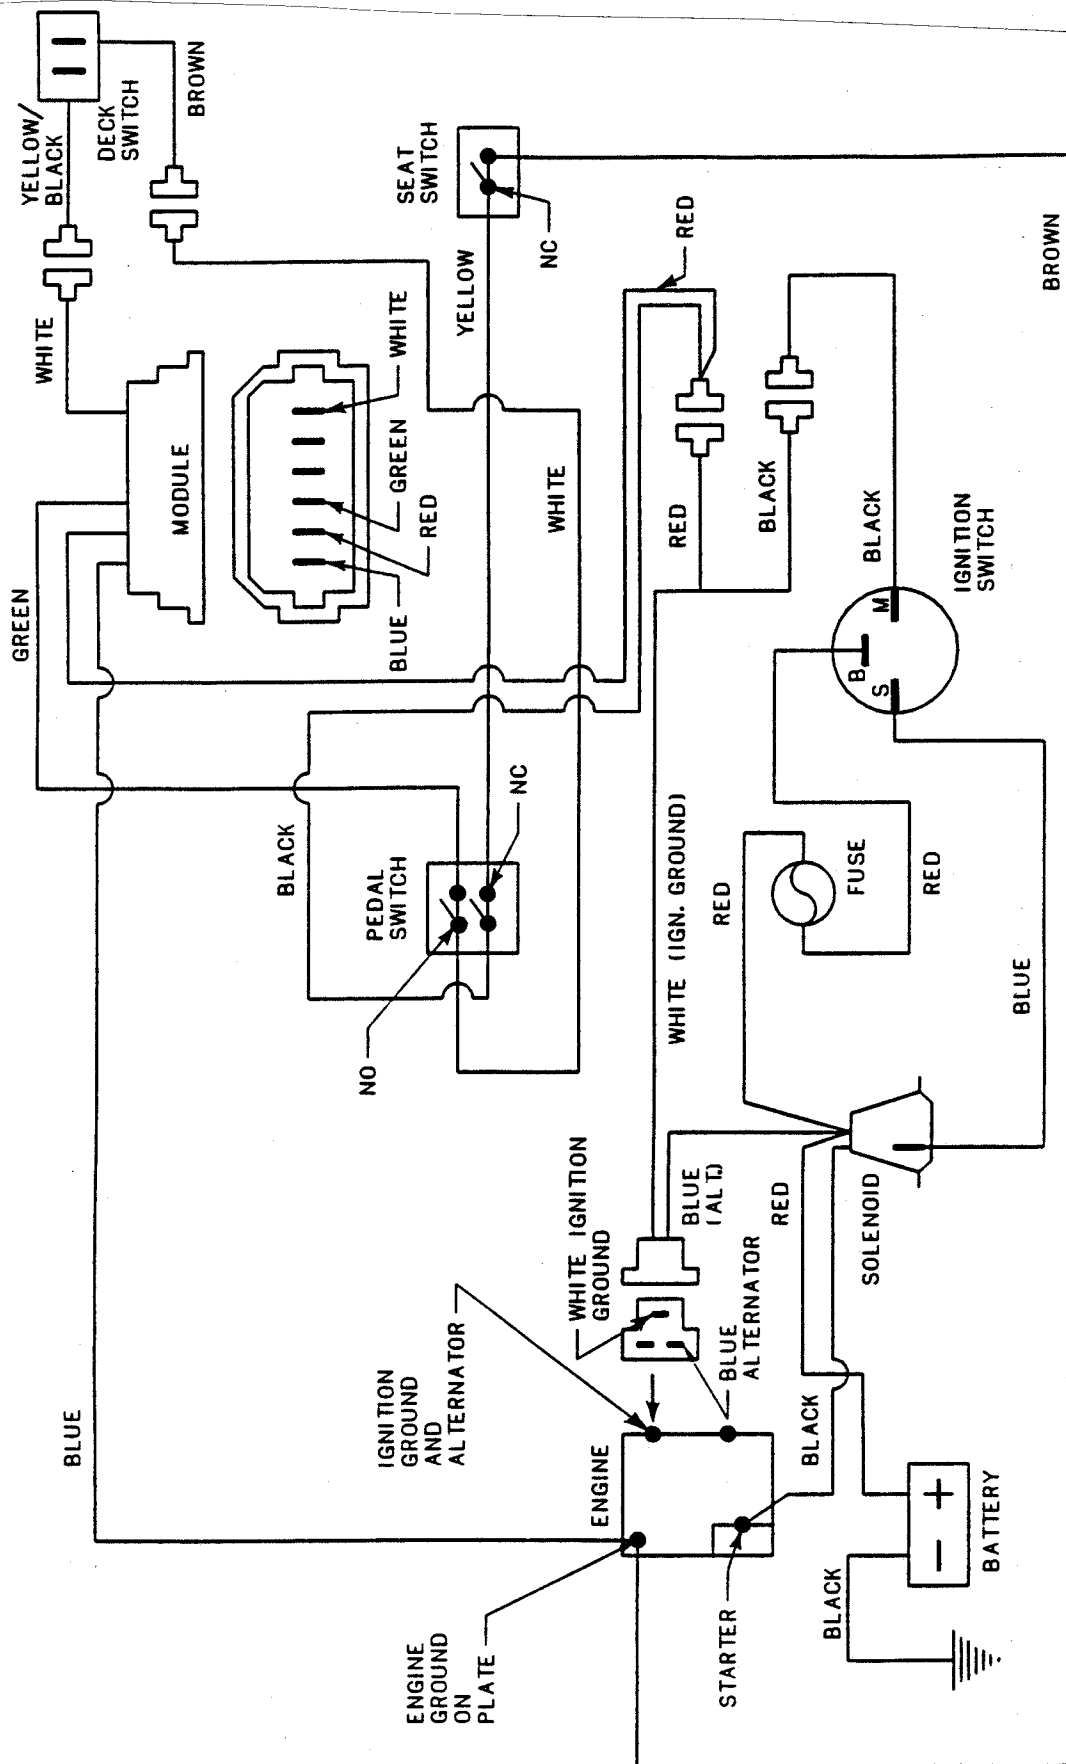

WIRING SCHEMATIC FOR 14 HP KOHLER ENGINES

EUROPEAN DECALS

BREMSBETRIEB

ANHALTEN: KUPPLINGS/BREMSPEDAL TRETEN.

ANZIEHEN DER PARKBREMS:
KUPPLINGS/BREMSPEDAL TRETEN,
PARKBREMSENZUGRIEDEL HOCHZIEHEN UND
KUPPLINGS/BREMSPEDAL LOSLASSEN.

ZUM LOSLASSEN DER PARKBREMS:
KUPPLINGS/BREMSPEDAL TRETEN.

BETRIEB DES MESSERS

EINSCHALTEN DES MESSERS:
MESSERHEBEL AUF „ON“ BZW. EN UND
„HOLD“ (FESTHALTEN). MESSERPEDAL MIT
DEM ABSATZ TRETEN. ZUM MÄHEN ABSATZ
AUF DEM MESSERPEDAL LASSEN.

AUSSCHALTEN DES MESSERS: ABSATZ WEG
VOM MESSERPEDAL ODER MESSERHEBEL
AUF „OFF“ BZW. AUS.

FONCTIONNEMENT DES FREINS

POUR L'ARRÊT: APPUYEZ SUR LA PÉDALE
EMBRAYAGE/FREIN.

POUR METTRE LES FREINS DE
STATIONNEMENT: APPUYEZ SUR LA PÉDALE
EMBRAYAGE/FREIN. SOULEVEZ LE LOQUET
DU FREIN DE STATIONNEMENT ET RELACHEZ
LES PÉDALES EMBRAYAGE/FREIN.

POUR RELÂCHER LES FREINS DE
STATIONNEMENT: APPUYEZ SUR LA PÉDALE
EMBRAYAGE/FREIN.

FONCTIONNEMENT DE LA LAME

POUR ACTIONNER LA LAME: DÉPLACER LE
LEVIER EN LE MAINTENANT. APPUYEZ AVEC
LE TALON. MAINTENEZ UN DE VOS TALONS
SUR LA PÉDALE POUR TONDER.

POUR ARRÊTER LA LAME: RETIRER VOTRE
TALON DE LA PÉDALE OU PLACER LE LEVIER
SUR OFF.

REMBEDIENING

OM TE STOPPEN: DUW
ONTKOPPELING/REMPEDAAL IN.

OM PARKEERREM AAN TE ZETTEN: DUW
ONTKOPPELING/REMPEDAAL IN. HEF
PARKEERHEFBOOM OP EN LAAT
ONTKOPPELING/REMPEDAAL LOS.

OM PARKEERREM LOS TE LATEN: DUW
ONTKOPPELING/REMPEDAAL IN.

MESBEDIENING

OM HET MES TE STARTEN: TREK
MESHEFBOOM NAAR "ON" EN HOUD VAST.
DUW OP MESPEDAAL MET HIEL. HOUD HIEL
OP MESPEDAAL OM TE MAAIEN.

OM HET MES TE STOPPEN: VERWIJDER HIEL
VAN MESPEDAAL OF VERPLAATS
MESHEFBOOM NAAR "OFF".



AVERTISSEMENT WARNUNG





POUR EVITER TOUT DANGER D'ACCIDENT

- LIRE SOIGNEUSEMENT TOUTS LES MANUELS
ET INSTRUCTIONS FOURNIS AVEC LA
MACHINE.
- ASSUREZ-VOUS QUE TOUTS LES BOULIERS
DE PROTECTION, CONTACTEURS ET AUTRES
DISPOSITIFS DE SECURITE SOIENT BIEN
EN PLACE ET FONCTIONNELS.
- GÉARABUSSEZ LA SURFACE À TONDER DE
TOUT FIL MÉTALLIQUE, PIÈRES OU TOUT
AUTRE OBJET QUI POURRAIT CAUSER DES
ACCIDENTS S'ILS ÉTAIENT PROJÉTÉS PAR
LA LAME.
- NE LAISSEZ JAMAIS LES ENFANTS DE
MOINS DE TROIS ANS SUR OU À
PROXIMITÉ DE LA TONDEUSE PENDANT
SON UTILISATION. ÉLOIGNEZ LES GENS
À UNE BONNE DISTANCE DE L'ENDROIT
OU VOUS TONDEZ.
- REGARDEZ BIEN D'ARRIÈRE VOUS AVANT
DE FAIRE MARCHE ARRÈRE.
- NE TONDEZ PAS SUR DES PENTES OU SUR
QUELQUE ENDROIT OÙ LA STABILITÉ
OU LA TRACTION SERAIENT DOUTEUSES.
SI VOUS NE POUVEZ PAS FAIRE MARCHE
ARRÈRE SUR UNE PENTE NE TONDEZ PAS.
- NE TONDEZ PAS EN DEVERS SUR DES
PENTES TONDEZ DE HAUT EN BAS.
VALENTISEZ ET NE FAITES PAS DE
VIRAGES BRUSQUES QUAND VOUS TONDEZ
SUR UNE SURFACE INCLINÉE.
- NE TONDEZ PAS SUR DES PENTES
SUPERIEURES À 10 DEGRÉS (ELEVATION
DE 30cm SUR UNE LONGUEUR DE 3m).
- CUTTEZ LES DEMARRAGES EN COTE SI
LA MACH. NE STOPPE EN MONTANT UNE
COTE. ARRÊTEZ LA LAME ET REDESCENDEZ
LA COTE.
- ARRÊTEZ LA LAME AVANT DE METTRE LE
PIED À TERRAIN ET DE QUITTER VOTRE
SIÈGE.

ZU UNFALLVERHÜTUNG

- LESEN SIE ALLE MITGELIEFERTEN
BETRIEBSANLEITUNGEN UND
VORSCHRIFTEN DURCH.
- STELLEN SIE SICHER, DASS SICH
SCHUTZBLECH, BLENDER, SCHALTER
UND SONSTIGE SICHERHEITSVORRICHTUNGEN IN DER
RICHTIGEN STELLUNG BEFINDEN UND
BETRIEBSFÄHIG SIND.
- ENTFERNEN SIE GRAS, STEINE UND
SONSTIGE GEGENSTÄNDE VON DER
MÄHFLÄCHE, DIE BEI BEROHRUNG MIT
DEM MESSER VERLETZUNGEN ODER
SACHSCHÄDEN VERURSACHEN KÖNNEN.
- GELDEN SIE BEIM MÄHEN KEINE KINDER
UNTER 12 JAHREN AUF DEM MÄHER ODER
RASER. ALLE ANDEREN PERSONEN
SOLLTEN EINEN SICHERHEITSABSTAND
EINHALTEN.
- SEHEN SIE VON DEN ZURÜCKSETZERN
NACH HINTER.
- MÄHEN SIE NICHT AN ABHÄNGEN ODER
IN BEFÜRCHTUNG, DAß DIE STABILITÄT DES
MÄHERS IN FRAGE GESTELLT WIRD.
MÄHEN SIE KEINE ABHÄNGE, DIE SIE
NICHT RÜCKWÄRTS HINTERFÄHREN
KÖNNEN.
- MÄHEN SIE ABHÄNGE NICHT QUER.
SONDERN HANGAB- UND HANGABWÄRTS
REDUZIEREN SIE DIE GESCHW. UND
VERMEIDEN SIE SCHÄRFE WENDE
AN ABHÄNGEN.
- MÄHEN SIE NICHT AN HÄNGEN MIT EINEM
GEFÄLLE VON MEHR ALS 10 GRAD (10,33
M HÖHE AUF 0,98 M LÄNGE).
- VERMEIDEN SIE ES, AN ABHÄNGEN
HANGABWÄRTS ZU STARTEN, WENN DER
MÄHER AUF DER AUFWÄRTSFÄHRT
ANHÄLT. WENN, SCHALTEN SIE DAS
MÄHWERK AUS, UND DEN HANG
RÜCKWÄRTS HINTER ZU FÄHREN.
- STOPPEN SIE VOR DEM ABSATZEN
DAS MÄHWERK.

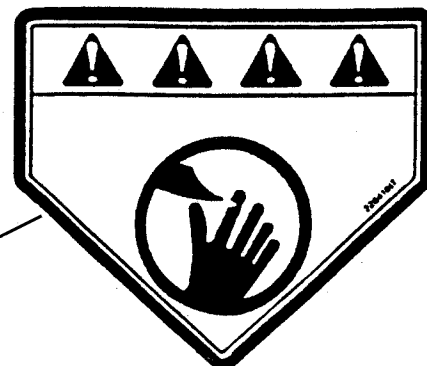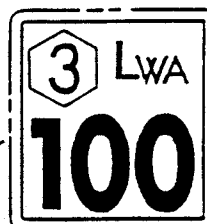

ATTENTION VORSICHT

LE DEFLECTEUR LATÉRAL
OU LE BAC DE RAMASSAGE
DOIVENT ÊTRE INSTALLÉS
AVANT L'UTILISATION
DE LA TONDEUSE.

VOR INBETRIEBSETZEN
DES MÄHERS SIND
AUSWURFBLECH BZW.
GRASFANGVORRICHTUNG
ZU BEFESTIGEN.

740578 RUGER

REMOVE BATTERY BEFORE
STANDING MOWER ON END
FOR MORE THAN 2 HOURS

ENTFERNEN SIE DIE BATERIE,
BEVOR SIE DEN REITERMAHER FÜR
MEHR ALS 2 STUDEN STELLEN

LA BATTERIE DOIT ÊTRE ENLEVÉE
AVANT DE METTRE LA TONDEUSE
DEBOUT POUR PLUS DE 2 HEURES

BATTERY VERWIJDEREN INDIEN
U DE MAAIER VOOR MEER DAN 2
UUR RECHT OP ZET

ITEM PART NO. DESCRIPTION

1	2-2215	DECAL, Brake Operation (German)
2	2-2216	DECAL, Brake Operation (French)
3	2-2218	DECAL, Brake Operation (Dutch)
4	2-2841	DECAL, WARNING
5	2-3009	DECAL, European Noise Control
6	2-9837	DECAL, SAFETY Instruction (German & French)
7	2-9776	DECAL, European Community
8	2-4052	DECAL, Deflector (German & French)
9	2-9948	DECAL, Battery Storage

(DECALS - Continued On Next Page)

WARNING

WAARSCHUWING

AVOID SERIOUS INJURY OR DEATH

- READ ALL MANUALS AND INSTRUCTIONS FURNISHED WITH THE MACHINE AND ATTACHMENTS.
- MAKE SURE THAT SHIELDS, GUARDS, SWITCHES, AND OTHER SAFETY DEVICES ARE IN PROPER POSITION AND ARE FUNCTIONAL.
- CLEAR MOWING AREA OF WIRE, ROCKS, AND OTHER OBJECTS THAT COULD CAUSE INJURY IF THROWN BY BLADE.
- DO NOT ALLOW CHILDREN (PRE-TEENAGERS) ON MACHINE EVEN WITH BLADE OFF ON IN YARD WHICH MOWING. KEEP OTHERS SAFELY AWAY FROM THE OPERATING AREA.
- LOOK DOWN AND BEHIND MACHINE BEFORE AND WHILE REVERSING.
- DO NOT MOW ON SLOPES OR ANY AREA WHERE STABILITY OR TRACTION IS IN DOUBT. IF YOU CAN NOT REVERSE UP A SLOPE, DO NOT MOW ON IT.
- DO NOT MOW ACROSS FACE OF SLOPES. MOW UP AND DOWN. REDUCE SPEED AND AVOID SHARP TURNS ON SLOPES.
- DO NOT MOW ON SLOPES STEEPER THAN 45 DEGREES (ONE FOOT OF RISE IN SIX FEET OF LENGTH).
- AVOID UPHILL STARTS. IF THE MACHINE IS STOPPED GOING UP A SLOPE, TURN BLADE OFF AND REVERSE DOWN THE SLOPE.
- STOP BLADE BEFORE PUTTING FOOT ON GROUND OR LEAVING THE SEAT.

VERMIJDT ERNSTIGE KWETSUREN . OOD DOODSLAG

- LEES ALLE GEBRUIKSAANWIJZINGEN EN INSTRUCTIES DIE MET DE MACHINE EN TOEGEHOREN GELEVERD ZIJN.
- VERZEKER U ERVAN DAT ALLE BESCHERMAPPEN, SCHERMLAAN EN ANDERE VEILIGHEIDSMIDDELEN IN GOEDE STAAT ZIJN EN GOED WERKEN.
- VERPLAAS ALLE VOORWERPEN UIT DE MAANDE DES ERNSTIGE KWETSUREN KUNNEN VERORZAKEN ALS ZE DOOR HET MES UITGEWORPEN WORDEN.
- LAAT GELUK KINDEKEN (1-12) TOE OP DE MACHINE (ZELFS MET UITGESCHAKELD MES) OF IN DE TUIN WAKENDS MET MAKEN EN HOUDT ANDEREN OP VEILIGE AFSTAND.
- NIET BENEEDEN EN ACHTER U ALS U ACHTERUITRIJDT.
- MAAN NIET OP HELLINGEN OF WAAR OOK ALS DE STABILITEIT VAN DE MACHINE TWIJFELACHTIG IS. RIJNT U ACHTERUIT NIET DE HELLING OP MAAN DAN NIET.
- MAAN EEN HELLING HOOGT IN DE LENGTE WAAR OP U AFWAARTS. MATIG UW SCHERPE EN VERPLAAS NIET DE GRASBEGEVENDE.
- MAAN GEEN HELLINGEN STEILER DAN 45 GRADEN (1,33 METER HOOG BIJ 0,96 METER LENGTE).
- VERMIJDT OM BEROOPWAARTS TE STARTEN. VALT DE MOTOR STIL, BEROOPWAARTS, SCHAKEL, DAN HET MES UIT EN LAAT U NAAR BENEEDEN ZAKEN.
- SCHAKEL HET MES UIT ALVORENS EEN VOET OP DE GROND TE ZETTEN OF DE ZITEL TE VERLATEN.

De machine niet gebruiken zonder de grasopvangzak of de beschermkap


Do not operate without entire Grass Catcher or Guard in place

Ne pas utiliser sans le bac de ramassage ou la projection en place

Betreiben Sie dieses Gerät nicht ohne Grasfangkorb oder Abdeckschutz

1995 28515

1994 29878

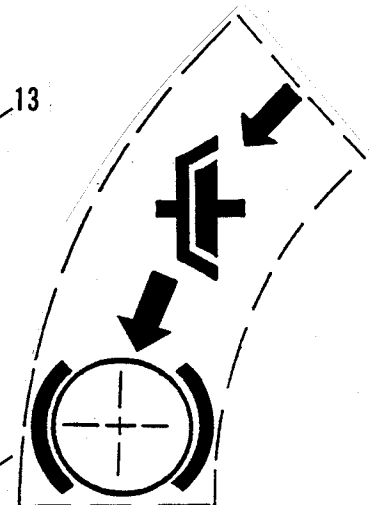

CAUTION

POSITIVE (+) BATTERY POST MUST BE TO REAR TO PREVENT ARCING AND POSSIBLE EXPLOSION OR FIRE. USE ONLY SNAPPER REPLACEMENT BATTERY TO AVOID ACID DAMAGE.

ATTENTION

LA COSSE POSITIVE (+) DE LA BATTERIE DOIT SE TROUVER AU FONDS DU LOGEMENT POUR EVITER LES ETINCELLES, L'EXPLOSION OU L'INCENDIE. UTILISER EXCLUSIVEMENT DES BATTERIES D'ORIGINE SNAPPER POUR EVITER LES RISQUES LIES A L'ACIDE.

ACTUNG

UM VERÄTZUNGEN: FEUER ODER MÖGLICHEN EXPLOSIONEN VORZUBEUGEN, MUSS SICH DER PLUSPOL DER BATTERIE HINTEN BEFINDEN. BENUTZEN SIE AUSSCHLIESSLICH ORIGINAL SNAPPER BATTERIEN UM SÄURESCHÄDEN ZU VERMEIDEN.

WAARSCHUWING

POSITIEVE (+) BATTERIJKLEM MOET ZICH ACHTERHAN BEVINDEN OM KORTSLUITING EN MOGELIJK ONTPLOFFINGS GEVAAR OF BARNED TE VOORKOMEN. OM BATTERIJZUUR SCHADE TE VOORKOMEN ALLEEN SNAPPER BATTERIEN GEBRUIKEN.

PATENTED

AUTOMATIC BLADE STOP

STOPS BLADE - NOT ENGINE

28 INCH
PATENTED HI-VAC

25 INCH
PATENTED HI-VAC



33 INCH
PATENTED HI-VAC

CAUTION/OPGEPAST

DEFLECTOR MUST BE FASTENED DOWN OR GRASS CATCHER INSTALLED BEFORE OPERATING MOWER.

DEFLEKTOR NEERLATEN OF GRASOPVANGZAK AANBRENGEN ALVORENS DE GRASMAAIER TE STARTEN.

ITEM	PART NO.	DESCRIPTION
10	2-9838	DECAL, SAFETY Instruction (English & Dutch)
11	2-8515	DECAL, Year Of Manufacture (1995)
12	2-9878	DECAL, Year Of Manufacture (1994)
13	2-9724	DECAL, DO NOT OPERATE!
14	2-8514	DECAL, Clutch/Brake
15	2-9947	DECAL, Battery CAUTION
16	2-4072	DECAL, Automatic Blade Stop
17	2-3992	DECAL, 25 Inch (Hi-Vac)
18	2-9839	DECAL, Deflector CAUTION (English & Dutch)
19	2-3996	DECAL, 28 Inch (Hi-Vac)
20	2-2991	DECAL, 33 Inch (Hi-Vac)

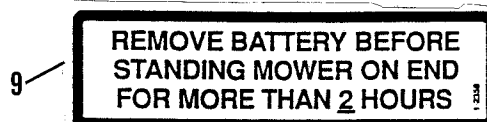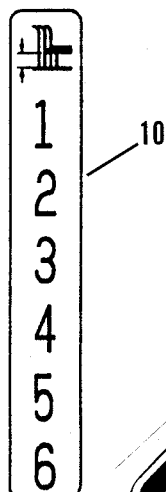

ITEM	PART NO.	DESCRIPTION
1	1-6974	DECAL, SNAPPER (Molded Logo)
2	2-3980	DECAL, Back-Up Recoil (33" Kohler Engine Models)
3	2-3982	DECAL, OHV (33" Kohler Engine Models)
4	3-4134	LOGO, Convertible (Silver) (25" Models)
—	2-4068	LOGO, Convertible (Teal) (28" Models)
—	2-4067	LOGO, Convertible (Blue) (33" Models)
5	2-2991	DECAL, 33 Inch
6	2-9453	MEDALLION, "Sam"
7	2-3996	DECAL, 28 Inch
8	2-3992	DECAL, 25 Inch
9	1-2358	DECAL, Battery
10	2-6419	DECAL, Height Of Cut
—	2-9077	DECAL, Year Of Manufacture (1996) (Not Shown)
—	2-3998	DECAL, Bumper Stripe (Teal) (Not Shown)

DECALS (Continued On Next Page)

DECALS




11




12

13

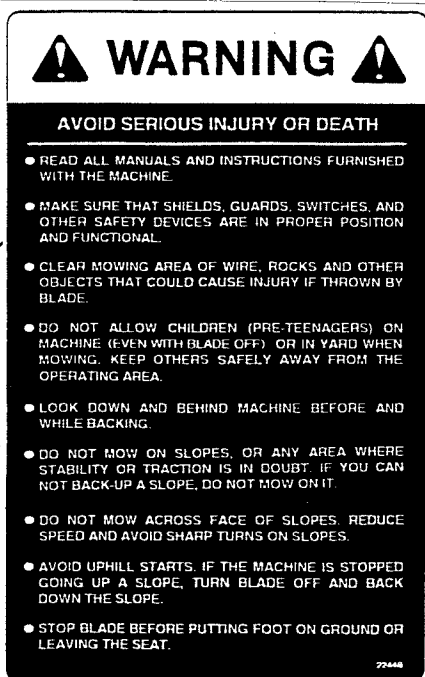


15

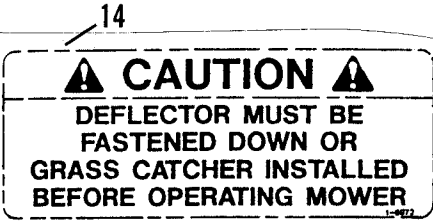

14




17

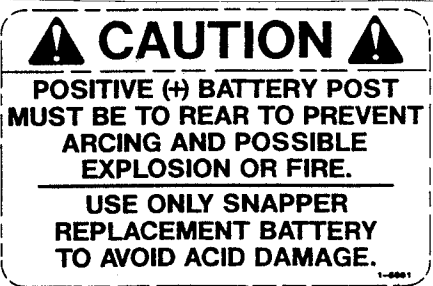

16



18

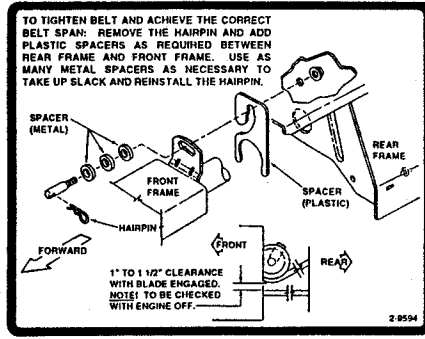

19

ITEM	PART NO.	DESCRIPTION
11	2-3983	DECAL, 14 HP (33" Kohler Engine Models)
12	2-4072	DECAL, Automatic Blade Stop (Point of Purchase Decal)
13	2-2448	DECAL, Safety Instruction Warning
14	1-6972	DECAL, CAUTION, Deflector
15	1-6973	DECAL, CAUTION, Rotating Blades
16	1-5691	DECAL, CAUTION, Battery
17	1-3010	DECAL, DANGER
18	2-9113	DECAL, CAUTION, Fuel
19	2-9594	DECAL, Belt Adjustment (Used On 25" Models)
*	2-8097	DECAL, SR825
*	2-9669	DECAL, SR928
*	2-7788	LOGO, SR1333 (Molded Logo)
*	2-7782	LOGO, SR1433 (Molded Logo)
*	2-4042	DECAL, Banner Stripe (Silver) (25" Models)
*	2-4043	DECAL, Banner Stripe (Teal) (28" Models)
*	2-4001	DECAL, Bumper Stripe (Silver) (25" Models)
*	2-4004	DECAL, Bumper Stripe (Blue) (33" Models)
-	1-4000	BOOK, Safety
-	1-5534	BOOKLET, Snapper Versus Dirt
-	2-8603	OPERATOR'S Manual/Safety Instruction

* **NOTE:** These Items Not Shown. The Description Is the Visual Identification.

SNAPPER®**2 YEAR LIMITED WARRANTY**

For two (2) years from purchase date for the original purchaser's residential, non-commercial use, SNAPPER, through any SNAPPER dealer will replace, free of charge (except for taxes where applicable), any part or parts found upon examination by the factory at McDonough, Georgia, to be defective in material or workmanship or both.

For ninety (90) days from purchase date for the original purchaser's commercial, rental, or other non-residential use, SNAPPER, through any SNAPPER dealer will replace, free of charge, any part or parts found upon examination by the factory at McDonough, Georgia, to be defective in material or workmanship or both.

All transportation costs incurred by the purchaser in submitting material to a SNAPPER dealer for replacement under this warranty must be paid by the purchaser.

This warranty does not apply to engines and their components, hydro transmissions, gear drive transmissions and batteries, as these items are warranted separately. This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper lubrication, normal wear, or other cause beyond our control.

There is no other express warranty.

Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to two (2) years from purchase date for the original purchaser's residential, non-commercial use [ninety (90) days from purchase for the original purchaser's commercial, rental or other non-residential use], and to the extent permitted by law, any and all implied warranties are excluded. This is the exclusive remedy. Liabilities for consequential damages, under any and all warranties are excluded.

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARNING: THE USE OF REPLACEMENT PARTS OTHER THAN GENUINE SNAPPER PARTS MAY IMPAIR THE SAFETY OF SNAPPER PRODUCTS AND WILL VOID ANY LIABILITY AND WARRANTY BY SNAPPER ASSOCIATED WITH THE USE OF SUCH PARTS.

IMPORTANT: Please fill out the attached SNAPPER Product Registration Card immediately and mail to:
SNAPPER, McDONOUGH, GEORGIA 30253

Parts Manual for

SNAPPER®

**EUROPEAN REAR
ENGINE RIDER
SERIES 15**

MODELS:

E250815BE

E280915BE

E331315BVE

E331415KVE

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.